

MaxiDas_Acura_V5.20 Function List

NOTES:

- This function is supported.
- ▲ This function is the new feature in this version.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Unit	ECU Info.	Read codes	Erase Codes	Live Data	Freeze Data	Active Test	Special Function
PGM-FI	•	•	•	•	•	•	30, 31, 38, 39, 45, 62, 79, 109
DIESEL	•	•	•	•	•	•	02, 29, 37, 53, 54, 55, 52, 61, 79, 86
A/T	•	•	•	•	•	0	13, 26, 27, 48, 60, 70, 85, 91, 92
CVT	•	•	•	•	•	0	21, 22, 50, 91, 93, 94, 95, 96, 100
ABS	•	•	•	•	*	0	06, 12, 63, 66, 68, 72, 99, 105, 111, 112
SRS	•	•	•	•	0	•	69, 103
EPS	•	•	•	•	•		01, 40, 43, 71, 101, 108
POP-UP HOOD	•	•	•	•			113
IMA	•	•	•	•	•		98, 64
IMMOBI	0	0	0	•	0	0	05, 80, 79, 84, 57, 104
KEYLESS ACCESS (RL)	•	•	•	•	0	0	97, 56, 82, 83
EVPS	•	•	•	•	•	0	
CMS	•	•	•	•	•	0	73, 28
ACM	•	•	•	•	•	•	
TPMS	•	•	•	•		0	89, 106
SH-AWD	•	•	•	•	•	0	93, 04, 36, 24, 35, 115, 101, 10, 51
VTM 4	•	•	•	•	•	0	51, 25
LKAS CAMERA	•	•	•	•	•	0	
LKAS CONTROL	•	•	•	•	•	0	102, 33
iNVS	•	•	•	•	•	0	20, 74, 114
Honda Smart Parking	•	•	•	•	•	0	110
Adaptive cruise	•	•	•	•	•	0	03, 09, 16, 17, 18, 19, 28, 47, 49, 59, 73, 107
Hydraulic booster	•	•	•	•	0	0	46, 44, 07
Active Damper System	•	•	•	•	•	0	34
4WS	•	•	•	•	•	•	67, 65, 41, 42, 75, 76
DBW	•	•	•	•	•	•	
ATTS	•	•	•	•	•	0	14, 101, 58, 11
i-SHIFT	•	•	•	•	0	0	
R/C ENG STARTER	0	0	0	0	0	0	104, 78, 77
BODY ELECTRICAL	•	•	•	•		•	
BSI	•	•	•	•		•	
Electric Parking Brake	•	•	•	•			88
MVCS	•	•	•	•		•	15, 08, 32, 33
PCU	•	•	•	•			87
SVT	•	•	•	•		•	90, 81, 23