

## MaxiDas\_Infiniti\_V4.30 Function List

#### NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

- O This function is not supported.
- ▲ This function is the new feature in this version.

	ECU	Read	Erase	Freeze	Live	Active	WORK	
Unit	Info.	codes	Codes	Data	Data	Test	SUPPORT	Other
ABS	•	•	•	*	•	•	*	
TCS	•	•	•	•	•	•	•	
IVMS	•	•	•	•	•	•	•	
CVT	•	•	•	0	•	0	•	CAN DIAG SUPPORT MNTR
ASCD	0	•	0	0	•	0	0	
AIR PRESSURE MONITOR	*	•	0	0	•	*	•	
Active SUS	•	•	•	•	•	•	•	
ACT D/SUS	•	•	•	•	•	•		
4WD	•	•	•	*	•	*	•	
SMART ENTRANCE	0	•	•	*	•	*	•	CAN DIAG SUPPORT MNTR
ICC	•	•	•	*	•	•	•	CAN DIAG SUPPORT MNTR
NATS	0	•	•	0	0	0	0	C/U INITIALIZATION SELF FOUNCTION CHECK
Engine	•	•	•	*	•	•	•	
A/T	•	•	•	*	•	*	•	
S/BLIND CAMERA	•	0	0	0	•	0	•	
REARVIEW CAMERA	•	0	0	0	•	0	•	
MOTOR ASSIST	0	•	•	0	•	0	•	
HEAD LAMP LEVELIZER	•	•	•	0	•	•	•	
DIFF LOCK	0	•	•	0	•	0	0	CAN DIAG SUPPORT MNTR
ALL MODE AWD/4WD	0	•	•	0	•	0	0	CAN DIAG SUPPORT MNTR
IPDM	0	•	•	0	•	•		
AIR LEVELIZER	•	•	•	0	•	•	•	
SONAR	•	•	•	0	•	•		
AT	•	•	•	0	•	•	•	CALIBRATION DATA
Airbag	0	•	•	0	0	0	0	READ CODES [PAST] TROUBLE DIAG RECORD ECU DISCRIMINATED NO
PRECRASH SEATBELT	•	•	•	0	•	0	0	CAN DIAG SUPPORT MNTR



## MaxiDas\_Infiniti\_V4.30 Function List

#### NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

- O This function is not supported.
- lacktriangle This function is the new feature in this version.

MULTI AV	*	•	•	0	•	0	0	
METER AC AMP	•	•	•	0	•	0	0	CAN DIAG SUPPORT MNTR
METER	0	•	•	0	•	0	0	CAN DIAG SUPPORT MNTR
IPDM E/R	0	•	•	0	•	•	0	CAN DIAG SUPPORT MNTR
INTELLIGENT KEY	•	•	•	0	•	•	•	CAN DIAG SUPPORT MNTR
HICAS	•	•	•	0	•	*		CAN DIAG SUPPORT MNTR
EPS	•	•	•	0	•	0	•	CAN DIAG SUPPORT MNTR
E-4WD	•	•	•	*	•	•		CAN DIAG SUPPORT MNTR
DRIVER POSITION	•	•	•	0	•	•	•	CAN DIAG SUPPORT MNTR
BCM	*	•	•	0	•	•	•	CAN DIAG SUPPORT MNTR
AUTO SLIDE DOOR	•	•	•	0	•	•		CAN DIAG SUPPORT MNTR
AFS	•	•	•	0	•	•	•	CAN DIAG SUPPORT MNTR
HVAC	•	•	•	0	•	•	•	
HYBRID SYSTEM	•	•	•	0	•	•		
LDW	•	•	•	0	•	•		CAN DIAG SUPPORT MNTR
AUTO BACK DOOR	0	•	•	0	•	0	0	
OCCUPANT DETECTION	0	0	0	0	0	•	0	
TOTAL ILLUM C/U	•	0	0	0	•	0	•	
CONVERTIBLE ROOF	•	•	•	0	•	•	•	

# -Autel

## Special\_Function

index	Specil Function Name			
0001	work support			
0002	CAN DIAG SUPPORT MNTR			
0003	ECU DISCRIMINATED NO"			
0004	C/U INITIALIZATION			
0005	READ CODES [PAST]			
0006	SELF FOUNCTION CHECK"			
0007	CALIBRATION DATA			
0008	TROUBLE DIAG RECORD			