

MaxiDas_Mazda_V6.00 Function List

NOTES:

● This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported. ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	4X4	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	ABS	●	●	●	●	0008
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	GEM	●	●	●	●	000A 000F
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	IC	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	PAM	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	PCM	●	●	●	●	0009 0023 0025 00C5
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	RCM	●	●	●	●	000C
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	4X4	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	ABS	●	●	●	●	0008
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	GEM	●	●	●	●	000A 000F
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	IC	●	●	●	●	0005
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	PAM	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	PCM	●	●	●	●	0009 0023 0025 00C5
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	RCM	●	●	●	●	000C
626 / 626 WAGON / TELSTAR	1. 8L	FP	1997 - 2000	PCM	●	●	●	●	0023 0025
626 / 626 WAGON / TELSTAR	1. 8L	FP	1999	ABS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	1. 8L	FP	2000	ABS/TCS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2. 0L	FS	1997 - 1999	ABS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2. 0L	FS	1997 - 2001	PCM	●	●	●	●	0023 0025
626 / 626 WAGON / TELSTAR	2. 0L	FS	1998 - 2001	ABS/TCS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2. 0L	RF-T	1997 - 2000	PCM	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2. 0L	RF-T	1999 - 2000	ABS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2. 5L	KL	1997 - 2001	PCM	●	●	●	●	0023 0025
626 / 626 WAGON / TELSTAR	2. 5L	KL	1998 - 2001	ABS/TCS	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	ABS	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	BCM/GEM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	EATC	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	EPS	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	IC	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	ICCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	LCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	MPM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	PCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	RCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	RKE	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	RVM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	TCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	4X4	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	ABS	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	BCM/GEM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	EATC	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	EPS	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	IC	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	ICCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	LCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	MPM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	PCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	RCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	RKE	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	RVM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	TCM	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	4X4	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	ABS	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	ACU	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	AFS	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	BCM/GEM	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	BSML	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	BSMR	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	EATC	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	EPS	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	FFH	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	IC	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	ICCM	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	LCM	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	MPM	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	PCM	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	RCM	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	RKE	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	RVM	●	●	●	●	○
ATENZA / MAZDA6	1.8L	L8	Other	TCM	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	4X4	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	ABS	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA / MAZDA6	2.0L	LF	Other	ACU	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	AFS	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	BCM/GEM	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	BSML	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	BSMR	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	EATC	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	EPS	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	FFH	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	IC	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	ICCM	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	LCM	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	MPM	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	PCM	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	RCM	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	RKE	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	RVM	●	●	●	●	○
ATENZA / MAZDA6	2.0L	LF	Other	TCM	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	4X4	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	ABS	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	ACU	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	AFS	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	BCM/GEM	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	BSML	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	BSMR	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	EATC	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	EPS	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	FFH	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	IC	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	ICCM	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	LCM	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	MPM	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	PCM	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	RCM	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	RKE	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	RVM	●	●	●	●	○
ATENZA / MAZDA6	2.2L	R2_T	Other	TCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA / MAZDA6	2.5L	L5	Other	4X4	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	ABS	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	ACU	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	AFS	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	BCM/GEM	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	BSML	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	BSMR	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	EATC	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	EPS	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	FFH	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	IC	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	ICCM	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	LCM	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	MPM	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	PCM	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	RCM	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	RKE	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	RVM	●	●	●	●	○
ATENZA / MAZDA6	2.5L	L5	Other	TCM	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	4X4	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	ABS	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	ACU	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	AFS	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	BCM/GEM	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	BSML	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	BSMR	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	EATC	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	EPS	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	FFH	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	IC	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	ICCM	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	LCM	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	MPM	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	PCM	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	RCM	●	●	●	●	○
ATENZA / MAZDA6	3.7L	CA	Other	RKE	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA / MAZDA6	3. 7L	CA	Other	RVM	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	Other	TCM	●	●	●	●	○
ATENZA AMC MZ	2. 0L	PE	Other	BSML	●	●	●	●	○
ATENZA AMC MZ	2. 0L	PE	Other	BSMR	●	●	●	○	○
ATENZA AMC MZ	2. 0L	PE	Other	RVM	●	●	●	○	○
ATENZA AMC MZ	2. 2L	SH	Other	BSML	●	●	●	●	○
ATENZA AMC MZ	2. 2L	SH	Other	BSMR	●	●	●	○	○
ATENZA AMC MZ	2. 2L	SH	Other	RVM	●	●	●	○	○
ATENZA AMC MZ	2. 5L	PY	Other	BSML	●	●	●	●	○
ATENZA AMC MZ	2. 5L	PY	Other	BSMR	●	●	●	○	○
ATENZA AMC MZ	2. 5L	PY	Other	RVM	●	●	●	○	○
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2002 - 2005	ABS/TCS	●	●	●	●	001E
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2002 - 2005	IC	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2002 - 2005	LHID	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2002 - 2005	PCM	●	●	●	●	0009 00C5 00C6
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2002 - 2005	RCM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2002 - 2005	RHID	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2005	GEM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2005	LCM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2005	RKE	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2005	TCM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3	2002 - 2005	4X4	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3	2002 - 2005	ABS/TCS	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3	2002 - 2005	IC	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3	2002 - 2005	LHID	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3	2002 - 2005	PCM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3	2002 - 2005	RCM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3	2002 - 2005	RHID	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3	2002 - 2005	TCM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3	2005	GEM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3	2005	LCM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3	2005	RKE	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3_T	2005	4X4	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3_T	2005	ABS/TCS	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3_T	2005	GEM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3_T	2005	IC	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA (JPN)/MAZDA6 (General)	2.3L	L3_T	2005	LCM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2.3L	L3_T	2005	LHID	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2.3L	L3_T	2005	PCM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2.3L	L3_T	2005	RCM	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2.3L	L3_T	2005	RHID	●	●	●	●	○
ATENZA (JPN)/MAZDA6 (General)	2.3L	L3_T	2005	RKE	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	ACU	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	BCM/GEM	●	●	●	○	○
AXELA / MAZDA3	1.5L	ZY	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	EATC	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	IC	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	PCM	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	1.5L	ZY	Other	TCM	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	ACU	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	BCM/GEM	●	●	●	○	○
AXELA / MAZDA3	1.6L	Y6	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	EATC	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	FACM	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	IC	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	MID#1	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3	1.6L	Y6	Other	PCM	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	1.6L	Y6	Other	TCM	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	ACU	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	BCM/GEM	●	●	●	○	○
AXELA / MAZDA3	1.6L	Z6	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	EATC	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	IC	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	PCM	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	1.6L	Z6	Other	TCM	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	ACU	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	BCM/GEM	●	●	●	○	○
AXELA / MAZDA3	2.0L	LF	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	EATC	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	IC	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	PCM	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	RCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3	2.0L	LF	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	2.0L	LF	Other	TCM	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	ACU	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	BCM/GEM	●	●	●	○	○
AXELA / MAZDA3	2.0L	PE	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	EATC	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	IC	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	PCM	●	●	●	○	0009
AXELA / MAZDA3	2.0L	PE	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	2.0L	PE	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	ACU	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	BCM/GEM	●	●	●	○	○
AXELA / MAZDA3	2.2L	R2_T	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	EATC	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	FFH	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	IC	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	PCM	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	2.2L	R2_T	Other	TCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3	2. 3L	L3_T	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	ACU	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	BCM/GEM	●	●	●	○	○
AXELA / MAZDA3	2. 3L	L3_T	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	EATC	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	IC	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	PCM	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_T	Other	TCM	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	4X4	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	ABS	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	ACU	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	AFS	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	BCM/GEM	●	●	●	○	○
AXELA / MAZDA3	2. 5L	L5	Other	BSML	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	BSMR	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	EATC	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	EPS	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	IC	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	LCM	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	MID#1	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	PCM	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	RCM	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	RKE	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	RVM	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	Other	TCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	ABS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	EATC	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 - 2006	EPS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 - 2006	GEM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 - 2006	IC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 - 2006	PCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2003 - 2006	RCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1.5L	ZY	2006	RKE	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	ABS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	EATC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	EPS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	GEM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	IC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	PCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	RCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	4X4	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	RKE	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	TCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	ABS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	EATC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	EPS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	GEM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	IC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	PCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	RCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	RKE	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	TCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	ABS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	EATC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	GEM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	IC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	PCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	RCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	RKE	●	●	●	●	○
AZ WAGON (MD/MJ)/SPIANO (HF)	660cc	F6A-T	1998 - Other	ABS	●	●	●	●	○
AZ WAGON (MD/MJ)/SPIANO (HF)	660cc	F6A-T	1998 - Other	PCM	●	●	●	●	○
AZ WAGON (MD/MJ)/SPIANO (HF)	660cc	F6A-T	1998 - Other	RCM	●	●	●	●	○
AZ WAGON (MD/MJ)/SPIANO (HF)	660cc	K6A	1998 - 2005	ABS	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A	1998 - 2005	PCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A	1998 - 2005	RCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998	TCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998 - Other	ABS	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998 - Other	PCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998 - Other	RCM	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A	2003 - 2006	ABS	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A	2003 - 2006	PCM	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A	2003 - 2006	RCM	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A_T	2003 - 2005	ABS	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A_T	2003 - 2005	PCM	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A_T	2003 - 2005	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	ABS	●	●	●	○	○
AZ-WAGON / CAROL	660cc	K6A	Other	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	EPS	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	PCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	TCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	Other	ABS	●	●	●	○	○
AZ-WAGON / CAROL	660cc	K6A S	Other	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	Other	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	Other	EPS	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	Other	PCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	Other	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	Other	TCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	ABS	●	●	●	○	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	EPS	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	PCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	Other	TCM	●	●	●	●	○
AZ_OFFROAD	660cc	K6A_T	1999 - 2008	ABS	●	●	●	●	○
AZ_OFFROAD	660cc	K6A_T	1999 - 2008	PCM	●	●	●	●	○
AZ_OFFROAD	660cc	K6A_T	1999 - 2008	RCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AZ_OFFROAD	660cc	K6A_T	1999 - 2008	TCM	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 2L	F2	1996 - Other	PCM	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL	2001	PCM	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL	2001 - 2002	ABS	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2001 - 2005	ABS	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2001 - 2005	PCM	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 6L	G6	1996 - 1999	PCM	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 6L	G6	1999	ABS	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 9L	W9	2002	ABS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	F8	1999	ABS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	F8	1999 - 2002	PCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	F8	2002	ABS/TCS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	F8	2002	TCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	L8	2010	ABS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	L8	2010	IC	●	●	●	○	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	L8	2010	PCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	L8	2010	TCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2003 - 2007	ABS/TCS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2003 - 2007	PCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2003 - 2007	TCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2. 2L	R2	1999	ABS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2. 2L	R2	1999	PCM	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	1. 8L	F8	1999	ABS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	1. 8L	F8	1999	PCM	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	1997 - 1999	ABS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	1997 - 2002	PCM	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	2002	ABS/TCS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	2002	TCM	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 2L	R2	1999	ABS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 2L	R2	1999	PCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.5L	WL	1999	ABS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.5L	WL	1999	PCM	●	●	●	●	○
BT-50 / Ranger	2.2L	F2	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2.2L	F2	2007	PCM	●	●	●	●	○
BT-50 / Ranger	2.2L	F2	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2.5L	L5	2012	ABS	●	●	●	●	○
BT-50 / Ranger	2.5L	L5	2012	PCM	●	●	●	○	○
BT-50 / Ranger	2.5L	WL	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2.5L	WL	2007	PCM	●	●	●	●	○
BT-50 / Ranger	2.5L	WL	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2.5L	WL-CD	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2.5L	WL-CD	2007	PCM	●	●	●	●	○
BT-50 / Ranger	2.5L	WL-CD	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2.5L	WL-CD	2007	TCM	●	●	●	●	○
BT-50 / Ranger	2.6L	G6	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2.6L	G6	2007	PCM	●	●	●	●	○
BT-50 / Ranger	2.6L	G6	2007	RCM	●	●	●	●	○
BT-50 / Ranger	3.0L	WE-CD	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	3.0L	WE-CD	2007	PCM	●	●	●	●	○
BT-50 / Ranger	3.0L	WE-CD	2007	RCM	●	●	●	●	○
BT-50 / Ranger	3.0L	WE-CD	2007	TCM	●	●	●	●	○
BT-50 / Ranger	4.0L	V6 SOHC	2007	ABS/TCS	●	●	●	●	0008
BT-50 / Ranger	4.0L	V6 SOHC	2007	ESOF	●	●	●	●	○
BT-50 / Ranger	4.0L	V6 SOHC	2007	PCM	●	●	●	●	0023
BT-50 / Ranger	4.0L	V6 SOHC	2007	RCM	●	●	●	●	○
Biante (Japan)	2.0L	LF	2008	4X4	●	●	●	●	○
Biante (Japan)	2.0L	LF	2008	ABS	●	●	●	●	○
Biante (Japan)	2.0L	LF	2008	EATC	●	●	●	●	○
Biante (Japan)	2.0L	LF	2008	EPS	●	●	●	●	○
Biante (Japan)	2.0L	LF	2008	GEM	●	●	●	●	○
Biante (Japan)	2.0L	LF	2008	IC	●	●	●	●	○
Biante (Japan)	2.0L	LF	2008	LPSDM	●	●	●	●	○
Biante (Japan)	2.0L	LF	2008	PCM	●	●	●	●	○
Biante (Japan)	2.0L	LF	2008	RCM	●	●	●	●	○
Biante (Japan)	2.0L	LF	2008	RKE	●	●	●	●	○
Biante (Japan)	2.0L	LF	2008	RPSDM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Biante (Japan)	2.0L	LF	2008	TCM	●	●	●	○	○
Biante (Japan)	2.3L	L3	2008	ABS	●	●	●	●	○
Biante (Japan)	2.3L	L3	2008	EATC	●	●	●	●	○
Biante (Japan)	2.3L	L3	2008	EPS	●	●	●	●	○
Biante (Japan)	2.3L	L3	2008	GEM	●	●	●	●	○
Biante (Japan)	2.3L	L3	2008	IC	●	●	●	●	○
Biante (Japan)	2.3L	L3	2008	LPSDM	●	●	●	●	○
Biante (Japan)	2.3L	L3	2008	PCM	●	●	●	●	○
Biante (Japan)	2.3L	L3	2008	RCM	●	●	●	●	○
Biante (Japan)	2.3L	L3	2008	RKE	●	●	●	●	○
Biante (Japan)	2.3L	L3	2008	RPSDM	●	●	●	●	○
Biante (Japan)	2.3L	L3	2008	TCM	●	●	●	○	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	1.8L	FP	1997 - 1999	PCM	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	1.8L	FP	1999	ABS	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1997 - 1999	PCM	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999	ABS	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	RF	1997	PCM	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.5L	KL	1999	ABS	●	●	●	●	○
CAROL	660cc	F6A	1998 - Other	ABS	●	●	●	●	○
CAROL	660cc	F6A	1998 - Other	PCM	●	●	●	●	○
CAROL	660cc	F6A	1998 - Other	RCM	●	●	●	●	○
CAROL	660cc	K6A	1998 - Other	ABS	●	●	●	●	○
CAROL	660cc	K6A	1998 - Other	PCM	●	●	●	●	○
CAROL	660cc	K6A	1998 - Other	RCM	●	●	●	●	○
CAROL	660cc	K6A	1998 - Other	TCM	●	●	●	●	○
CAROL (2003 / 9 -)	660cc	K6A	2003 - 2004	PCM	●	●	●	●	○
CAROL (2003 / 9 -)	660cc	K6A	2003 - Other	ABS	●	●	●	●	○
CAROL (2003 / 9 -)	660cc	K6A	2003 - Other	RCM	●	●	●	●	○
CAROL (HB24S)	660cc	K6A	2004 - 2005	ABS	●	●	●	●	○
CAROL (HB24S)	660cc	K6A	2004 - 2005	PCM	●	●	●	●	○
CAROL (HB24S)	660cc	K6A	2004 - 2005	RCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009	4X4	●	●	●	●	○
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009	ABS	●	●	●	●	○
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009	ACU	●	●	●	●	○
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009	AM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2.2L	R2_T	2009	EATC	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	EPS	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	FFH	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	GEM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	IC	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	LCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	MID#1	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	PCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RKE	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RVM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	SCR CU	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	4X4	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	ABS	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	AM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	EATC	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	GEM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	IC	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	LCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	PCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	RCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	RKE	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	TCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	ACU	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	MID#1	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	RVM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	4X4	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	ABS	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	AM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	EATC	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	GEM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	IC	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	ICCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	LCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	PCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	RCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	RKE	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CX-7 (Japan / General Specs.)	2.3L	L3_T	2006 - 2009	TCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009	ACU	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009	MID#1	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.3L	L3_T	2009	RVM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	4X4	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	ABS	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	ACU	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	AM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	EATC	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	GEM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	IC	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	ICCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	LCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	MID#1	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	PCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	RCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	RKE	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	RVM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2.5L	L5	2009	TCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	4X4	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	ABS	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	AM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	EATC	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	GEM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	IC	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	PCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	RCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	RKE	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2007 - 2010	TCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2010	ACU	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2010	BSML	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2010	BSMR	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2010	LCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.3L	L3_T	2010	MID#1	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	4X4	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	ABS	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CX-7 (North America / General Specs.)	2.5L	L5	2010	ACU	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	AM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	BSML	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	BSMR	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	EATC	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	GEM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	IC	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	LCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	MID#1	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	PCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	RCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	RKE	●	●	●	●	○
CX-7 (North America / General Specs.)	2.5L	L5	2010	TCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	4X4	●	●	●	●	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	ABS	●	●	●	●	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	AM	●	●	●	●	0005
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	GEM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	IC	●	●	●	●	0005 001A
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	LCM	●	●	○	○	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	LTM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	PCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	RCM	●	●	●	●	0005
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	RKE	●	●	●	●	0005
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	TCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	4X4	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	ABS	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	AM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	BSML	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	BSMR	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	GEM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	IC	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	LCM	●	●	○	○	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	LTM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	PCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	RCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	RKE	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	TCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2010 - 2011	ACU	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2010 - 2011	DSM	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2011	VSM	●	●	●	○	○
CX_7	2. 0L	PE	Other	BSML	●	●	●	●	○
CX_7	2. 0L	PE	Other	BSMR	●	●	●	○	○
CX_7	2. 0L	PE	Other	RVM	●	●	●	○	○
CX_7	2. 2L	SH	Other	BSML	●	●	●	●	○
CX_7	2. 2L	SH	Other	BSMR	●	●	●	○	○
CX_7	2. 2L	SH	Other	RVM	●	●	●	○	○
CX_7	2. 5L	PY	Other	BSML	●	●	●	●	○
CX_7	2. 5L	PY	Other	BSMR	●	●	●	○	○
CX_7	2. 5L	PY	Other	RVM	●	●	●	○	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	4X4	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	BCM/GEM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	EPS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	PCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	BCM/GEM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	EPS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	PCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	TCM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - 2005	PCM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - Other	4X4	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - Other	ABS/TCS	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - Other	IC	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - Other	RCM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - Other	RKE	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

● This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported. ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	2005	EPS	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	2005	LCM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - 2005	PCM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - Other	4X4	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - Other	ABS/TCS	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - Other	IC	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - Other	RCM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - Other	RKE	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2005	EPS	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2005	LCM	●	●	●	●	○
DEMIO / 121_DEMIO / 121	1.3L	B3	1996 - 2000	ABS	●	●	●	●	○
DEMIO / 121_DEMIO / 121	1.3L	B3	1996 - 2000	PCM	●	●	●	●	○
DEMIO / 121_DEMIO / 121	1.3L	B3	2000	ABS/TCS	●	●	●	●	○
DEMIO / 121_DEMIO / 121	1.5L	B5	1996 - 2000	ABS	●	●	●	●	○
DEMIO / 121_DEMIO / 121	1.5L	B5	2000	ABS/TCS	●	●	●	●	○
DEMIO / 121_DEMIO / 121	1.5L	B5	2000	PCM	●	●	●	●	○
DEMIO / FESTIVA MINI WAGON	1.3L	B3	1996 - 1999	ABS	●	●	●	●	○
DEMIO / FESTIVA MINI WAGON	1.3L	B3	1996 - Other	PCM	●	●	●	●	○
DEMIO / FESTIVA MINI WAGON	1.3L	B3	2000	ABS/TCS	●	●	●	●	○
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1996 - 1999	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	4X4	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	BCM/GEM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	EATC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	EPS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	PCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	VSM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	4X4	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	BCM/GEM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	EATC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	EPS	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DEMIO_(JPN) / MAZDA2_(OTHER)	1.3L	ZJ	Other	IC	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.3L	ZJ	Other	PCM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.3L	ZJ	Other	RCM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.3L	ZJ	Other	RKE	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.3L	ZJ	Other	TCM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.3L	ZJ	Other	VSM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.5L	ZY	Other	4X4	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.5L	ZY	Other	ABS	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.5L	ZY	Other	BCM/GEM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.5L	ZY	Other	EATC	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.5L	ZY	Other	EPS	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.5L	ZY	Other	IC	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.5L	ZY	Other	PCM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.5L	ZY	Other	RCM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.5L	ZY	Other	RKE	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.5L	ZY	Other	TCM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.5L	ZY	Other	VSM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.6L	Y6	Other	4X4	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.6L	Y6	Other	ABS	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.6L	Y6	Other	BCM/GEM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.6L	Y6	Other	EATC	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.6L	Y6	Other	EPS	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.6L	Y6	Other	IC	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.6L	Y6	Other	PCM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.6L	Y6	Other	RCM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.6L	Y6	Other	RKE	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.6L	Y6	Other	TCM	●	●	●	●	○
DEMIO_(JPN) / MAZDA2_(OTHER)	1.6L	Y6	Other	VSM	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	ABS	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	GEM	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	IC	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	PCM	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	RCM	●	●	●	●	○
Escape / Tribute (2006/3)	2.3L	L3	2003	ABS	●	●	●	●	○
Escape / Tribute (2006/3)	2.3L	L3	2003	GEM	●	●	●	●	○
Escape / Tribute (2006/3)	2.3L	L3	2003	IC	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape / Tribute (2006/3)	2. 3L	L3	2003	PCM	●	●	●	●	○
Escape / Tribute (2006/3)	2. 3L	L3	2003	RCM	●	●	●	●	○
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	ABS/TCS	●	●	●	●	0008
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	GEM	●	●	●	●	000A
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	IC	●	●	●	●	○
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	PCM	●	●	●	●	0009 0010 0023 0025 0028 0031 0033
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	RCM	●	●	●	●	○
Escape / Tribute / Maverick	2. 0L	Zetec	2003 - 2004	PAM	●	●	●	●	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	4X4	●	●	●	●	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	ABS	●	●	●	●	0008
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	GEM	●	●	●	●	000A 000F
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	IC	●	●	●	●	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	PAM	●	●	●	●	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	PCM	●	●	●	●	0009 0010 0023 0025 0028 0031 0033 00C5
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	RCM	●	●	●	●	000C
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2004	ABS/TCS	●	●	●	●	0008
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2007	GEM	●	●	●	●	000A 000F
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2007	IC	●	●	●	●	0005
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2007	PCM	●	●	●	●	0009 0010 0023 0025 0028 0031 0033 00C5
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2007	RCM	●	●	●	●	000C
Escape / Tribute / Maverick	3. 0L	4V	2003 - 2007	PAM	●	●	●	●	○
Escape / Tribute / Maverick	3. 0L	4V	2006 - 2007	4X4	●	●	●	●	○
Escape / Tribute / Maverick	3. 0L	4V	2006 - 2007	ABS	●	●	●	●	0005 0008
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	●	0012
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2013	ACM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2013	APIM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2013	DDM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2013	DSM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2013	DSP	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCDIM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCIM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2013	GPSM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2013	HCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	HVAC	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPC	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-B	●	●	●	○	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PAM	●	●	○	○	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0023 0025
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PDM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PSCM	●	●	●	○	00CB 00CC
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	RCM	●	●	●	○	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	RFA	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	RGTM	●	●	●	○	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	SASM	●	●	●	○	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	SOD-L	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	SOD-R	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	TRM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	●	0012
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ACM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	APIM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	DDM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	DSM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	DSP	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCDIM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCIM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	GPSM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HCM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HVAC	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPC	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-B	●	●	●	○	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PAM	●	●	○	○	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0023 0025
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PDM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PSCM	●	●	●	○	00CB 00CC
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	RCM	●	●	●	○	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	RFA	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	RGTM	●	●	●	○	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SASM	●	●	●	○	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SOD-L	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SOD-R	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	TRM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	ABS	●	●	●	●	0012
Escape/Kuga	2.5L	IVCT	2013	ACM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	APIM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	BCM#1	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	DDM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	DSM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	DSP	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	FCDIM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	FCIM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	GPSM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	HCM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	HVAC	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	IPC	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	IPM-B	●	●	●	○	○
Escape/Kuga	2.5L	IVCT	2013	OCSM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	PAM	●	●	○	○	○
Escape/Kuga	2.5L	IVCT	2013	PCM	●	●	●	●	0023 0025
Escape/Kuga	2.5L	IVCT	2013	PDM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	PSCM	●	●	●	○	00CB 00CC
Escape/Kuga	2.5L	IVCT	2013	RCM	●	●	●	○	○
Escape/Kuga	2.5L	IVCT	2013	RFA	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	RGTM	●	●	●	○	○
Escape/Kuga	2.5L	IVCT	2013	SASM	●	●	●	○	○
Escape/Kuga	2.5L	IVCT	2013	SOD-L	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	SOD-R	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	TRM	●	●	●	●	○
Escape_/Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	4X4	●	●	●	●	○
Escape_/Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	ABS	●	●	●	●	0005 0008 0012
Escape_/Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	ACM	●	●	●	●	○
Escape_/Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	FCIM	●	●	●	●	○
Escape_/Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	FDIM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	GEM / SJB	●	●	●	●	000A 000F 0042
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	HVAC	●	●	●	●	○
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	IC	●	●	●	●	0005 0009
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	OCSM	●	●	●	○	000C
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	PAM	●	●	●	●	○
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	PCM	●	●	●	●	0010 0023 0025 0028 0031 0033
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	PSCM	●	●	○	○	0005 0053
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	RCM	●	●	●	●	0005
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	SDARS	●	●	●	●	○
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	4X4	●	●	●	●	○
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	ABS	●	●	●	●	0005 0012
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	ACM	●	●	●	●	0005
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	BCM	●	●	●	●	○
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	FCIM	●	●	●	●	○
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	FDIM	●	●	●	●	0005
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	GEM / SJB	●	●	●	●	000A 000F 0042
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	HVAC	●	●	●	●	○
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	IC	●	●	●	●	0005 0009
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	OCSM	●	●	●	○	000C
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PAM	●	●	●	●	○
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PCM	●	●	●	●	0010 0023 0025 0028 0031 0033 00C5
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PSCM	●	●	○	○	0005 0053
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	RCM	●	●	●	●	0005
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	SDARS	●	●	●	●	○
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	TCM	●	●	●	●	○
Escape_/Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009	SDARS	●	●	●	●	○
Escape_/Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	4X4	●	●	●	●	○
Escape_/Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	ABS	●	●	●	●	0012
Escape_/Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	ACM	●	●	●	●	○
Escape_/Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	APIM	●	●	●	●	○
Escape_/Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	FCIM	●	●	●	●	○
Escape_/Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	FDIM	●	●	●	●	○
Escape_/Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	GEM / SJB	●	●	●	●	000A 000F 0042
Escape_/Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	HVAC	●	●	●	●	○
Escape_/Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	IC	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

● This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported. ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	OCSM	●	●	●	○	000C
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	PAM	●	●	●	●	○
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	PCM	●	●	●	●	0025
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	PSCM	●	●	○	○	○
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	RCM	●	●	●	●	○
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 - 2012	GPSM	●	●	●	○	○
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009	SDARS	●	●	●	●	○
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	4X4	●	●	●	●	○
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	ABS	●	●	●	●	0005
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	ACM	●	●	●	●	○
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	APIM	●	●	●	●	○
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	BCM	●	●	●	●	○
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	FCIM	●	●	●	●	○
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	FDIM	●	●	●	●	0005
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	GEM / SJB	●	●	●	●	000A 000F 0042
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	HVAC	●	●	●	●	○
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	IC	●	●	●	●	0009 0005
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	OCSM	●	●	●	○	000C
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	PAM	●	●	●	●	○
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	PCM	●	●	●	●	0023 0025 0010 0028 0031 0033
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	PSCM	●	●	○	○	0053 0005 00CC
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	RCM	●	●	●	●	0005
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	TCM	●	●	●	●	○
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 - 2012	ACCM#2	●	●	●	●	○
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 - 2012	GPSM	●	●	●	○	○
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2009	SDARS	●	●	●	●	0005 0019
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	4X4	●	●	●	●	○
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	ABS	●	●	●	●	0005 0008 0012
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	ACM	●	●	●	●	0017 0018
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	FCIM	●	●	●	●	○
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	FDIM	●	●	●	●	0005
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	GEM / SJB	●	●	●	●	000A 000F 0042
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	HVAC	●	●	●	●	0005
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	IC	●	●	●	●	0009 0005
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	OCSM	●	●	●	○	000C
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	PAM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	PCM	●	●	●	●	0010 0023 0025 0028 0031 0033 0009 00C5
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	PSCM	●	●	○	○	0005 0053
Escape_/Tribute / Mariner	3.0L	4V	2008 - 2012	RCM	●	●	●	●	0005
Escape_/Tribute / Mariner	3.0L	4V	2009 - 2012	APIM	●	●	●	●	001C
Escape_/Tribute / Mariner	3.0L	4V	2010 - 2012	GPSM	●	●	●	○	○
Escape_/Tribute / Mariner	Other	Other	2012	4X4	●	●	●	●	○
Escape_/Tribute / Mariner	Other	Other	2012	ABS	●	●	●	●	○
Escape_/Tribute / Mariner	Other	Other	2012	ACM	●	●	●	○	○
Escape_/Tribute / Mariner	Other	Other	2012	APIM	●	●	●	○	○
Escape_/Tribute / Mariner	Other	Other	2012	FCIM	●	●	●	●	○
Escape_/Tribute / Mariner	Other	Other	2012	FDIM	●	●	●	●	○
Escape_/Tribute / Mariner	Other	Other	2012	GEM / SJB	●	●	●	●	0042
Escape_/Tribute / Mariner	Other	Other	2012	GPSM	●	●	●	●	○
Escape_/Tribute / Mariner	Other	Other	2012	HVAC	●	●	●	●	○
Escape_/Tribute / Mariner	Other	Other	2012	IC	●	●	●	●	○
Escape_/Tribute / Mariner	Other	Other	2012	OCSM	●	●	●	○	○
Escape_/Tribute / Mariner	Other	Other	2012	PAM	●	●	●	○	○
Escape_/Tribute / Mariner	Other	Other	2012	PSCM	●	●	○	○	○
Escape_/Tribute / Mariner	Other	Other	2012	RCM	●	●	●	●	○
FAMILIA / LASER	1.3L	B3	1998	ABS	●	●	●	●	○
FAMILIA / LASER	1.3L	B3	1998	PCM	●	●	●	●	○
FAMILIA / LASER	1.5L	ZL	1998 - 2000	ABS	●	●	●	●	○
FAMILIA / LASER	1.5L	ZL	1998 - 2002	PCM	●	●	●	●	○
FAMILIA / LASER	1.5L	ZL	2000 - 2002	ABS/TCS	●	●	●	●	○
FAMILIA / LASER	1.8L	FP	1998	ABS	●	●	●	●	○
FAMILIA / LASER	1.8L	FP	1998	PCM	●	●	●	●	○
FAMILIA / LASER	2.0L	FS	1999 - 2000	ABS	●	●	●	●	○
FAMILIA / LASER	2.0L	FS	1999 - 2002	PCM	●	●	●	●	○
FAMILIA / LASER	2.0L	FS	2002	ABS/TCS	●	●	●	●	○
FAMILIA / LASER	2.0L	RF	1998	ABS	●	●	●	●	○
FAMILIA / LASER	2.0L	RF	1998	PCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007	ABS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007	EPS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007	GEM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007	IC	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1.2L	CR12	2007	IPDM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	PCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	RCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	ABS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	EPS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	GEM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	IC	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	IPDM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	PCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	RCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	ABS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	EPS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	GEM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	IC	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	IPDM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	PCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	RCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	ABS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	EPS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	GEM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	IC	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	IPDM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	PCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	RCM	●	●	●	●	○
FAMILIA WAGON/VAN (B*Y11_500000_)	1. 3L	QG13	1999 - 2002	PCM	●	●	●	●	○
FAMILIA WAGON/VAN (B*Y11_500000_)	1. 3L	QG13	2002	ABS	●	●	●	●	○
FAMILIA WAGON/VAN (B*Y11_500000_)	1. 5L	QG15	1999 - 2002	PCM	●	●	●	●	○
FAMILIA WAGON/VAN (B*Y11_500000_)	1. 5L	QG15	2002	ABS	●	●	●	●	○
FAMILIA WAGON/VAN (B*Y11_500000_)	1. 8L	QG18	1999 - 2002	PCM	●	●	●	●	○
FRIENDEE / FREDA / BONGO FRIENDEE	2. 0L	FE	1997 - 2002	PCM	●	●	●	●	○
FRIENDEE / FREDA / BONGO FRIENDEE	2. 0L	FE	2002	TCM	●	●	●	●	○
FRIENDEE / FREDA / BONGO FRIENDEE	2. 5L	WL_T	1999	PCM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1996 - 1999	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1996 - 1999	PCM	●	●	●	●	0025 0023
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1999	ECS	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta / Mazda_121 / Bantam	1.0L	Zetec Rocam	1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.0L	Zetec Rocam	1999	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.0L	Zetec Rocam	1999	ECS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.0L	Zetec Rocam	1999	GEM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.0L	Zetec Rocam	1999	HEC	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.0L	Zetec Rocam	1999	PCM	●	●	●	●	0023 0025
Fiesta / Mazda_121 / Bantam	1.25L	Zetec-SE	1996 - 2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.25L	Zetec-SE	1996 - 2000	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.25L	Zetec-SE	1996 - 2000	HEC	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.25L	Zetec-SE	1996 - 2000	PCM	●	●	●	●	0023 0025
Fiesta / Mazda_121 / Bantam	1.25L	Zetec-SE	1999 - 2000	ECS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.25L	Zetec-SE	1999 - 2000	GEM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.25L	Zetec-SE	2000	PATS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1996 - 1999	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1996 - 1999	PCM	●	●	●	●	0023 0025 0009
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999	ECS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999	GEM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	1.4 PT-E SFI	1994 - 1996	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	1.4 PT-E SFI	1994 - 1996	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	1.4 PT-E SFI	1994 - 1996	HEC	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	PT-E	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	PT-E	2000	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	PT-E	2000	ECS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	PT-E	2000	HEC	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	PT-E	2000	PCM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1996 - 1999	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1996 - 1999	PCM	●	●	●	●	0023 0025 0009
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1999	ECS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1999	GEM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Other	2001	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Other	2001	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Other	2001	GEM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta / Mazda_121 / Bantam	1.6L	Other	2001	HEC	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Other	2001	PATS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Other	2001	PCM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Zetec Rocam	1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Zetec Rocam	1999	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Zetec Rocam	1999	ECS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Zetec Rocam	1999	GEM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Zetec Rocam	1999	HEC	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Zetec Rocam	1999	PCM	●	●	●	●	0023 0025
Fiesta / Mazda_121 / Bantam	1.6L	Zetec-SE	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Zetec-SE	2000	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Zetec-SE	2000	ECS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Zetec-SE	2000	GEM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Zetec-SE	2000	HEC	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.6L	Zetec-SE	2000	PCM	●	●	●	●	0009 0023 0025
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000	ECS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000	FIP	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000	GEM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000	HEC	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000	PATS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000	PCM	●	●	●	●	0009
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	1996 - Other	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	1996 - Other	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	1996 - Other	ECS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	1996 - Other	HEC	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	1996 - Other	PATS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	1996 - Other	PCM	○	○	●	○	○
Fiesta / Mazda_121 / Bantam	1.8L	Zetec	1992 - 1994	ABS/TCS	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Zetec	1992 - 1994	CSM	●	●	●	●	○
Fiesta / Mazda_121 / Bantam	1.8L	Zetec	1992 - 1994	HEC	●	●	●	●	○
LAPUTA	660cc	F6A-T	1998	TCM	●	●	●	●	○
LAPUTA	660cc	F6A-T	1998 - Other	ABS	●	●	●	●	○
LAPUTA	660cc	F6A-T	1998 - Other	PCM	●	●	●	●	○
LAPUTA	660cc	F6A-T	1998 - Other	RCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
LAPUTA	660cc	K6A	2000 - Other	ABS	●	●	●	●	○
LAPUTA	660cc	K6A	2000 - Other	PCM	●	●	●	●	○
LAPUTA	660cc	K6A	2000 - Other	RCM	●	●	●	●	○
LAPUTA	660cc	K6A_T	1999 - Other	ABS	●	●	●	●	○
LAPUTA	660cc	K6A_T	1999 - Other	PCM	●	●	●	●	○
LAPUTA	660cc	K6A_T	1999 - Other	RCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 3L	B3	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 3L	B3	1996 - Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 3L	B3	2000	ABS/TCS	●	●	●	●	○
LASER / 323 / TIERRA	1. 3L	Other	Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 5L	Other	Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 5L	Z5	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 5L	Z5	1996 - Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 5L	ZL	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 5L	ZL	1998 - Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 6L	B6	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 6L	B6	1996 - Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 6L	Other	Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 6L	ZM	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 6L	ZM	1998 - Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 6L	ZM	2000	ABS/TCS	●	●	●	●	○
LASER / 323 / TIERRA	1. 8L	BP	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 8L	BP	1996 - Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 8L	FP	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 8L	FP	1998 - Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 8L	Other	Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	FS	2000	ABS/TCS	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	FS	2000 - 2001	ABS	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	FS	2000 - 2001	PCM	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	RF	1998	PCM	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	RF	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	RF-T	1998 - 2000	PCM	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	RF-T	2000	ABS	●	●	●	●	○
MARVIE	2. 5L	G5	1996	PCM	●	●	●	●	○
MAZDA 929	3. 0L	JE	1997	PCM	●	●	●	●	○
MAZDA2 (China)	1. 3L	ZJ	2007	ABS	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.
- ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA2 (China)	1.3L	ZJ	2007	BCM/GEM	●	●	●	●	○
MAZDA2 (China)	1.3L	ZJ	2007	EPS	●	●	●	●	○
MAZDA2 (China)	1.3L	ZJ	2007	IC	●	●	●	●	○
MAZDA2 (China)	1.3L	ZJ	2007	PCM	●	●	●	●	○
MAZDA2 (China)	1.3L	ZJ	2007	RCM	●	●	●	●	○
MAZDA2 (China)	1.3L	ZJ	2007	RKE	●	●	●	●	○
MAZDA2 (China)	1.5L	ZY	2007	ABS	●	●	●	●	○
MAZDA2 (China)	1.5L	ZY	2007	BCM/GEM	●	●	●	●	○
MAZDA2 (China)	1.5L	ZY	2007	EPS	●	●	●	●	○
MAZDA2 (China)	1.5L	ZY	2007	IC	●	●	●	●	○
MAZDA2 (China)	1.5L	ZY	2007	PCM	●	●	●	●	○
MAZDA2 (China)	1.5L	ZY	2007	RCM	●	●	●	●	○
MAZDA2 (China)	1.5L	ZY	2007	RKE	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.25L	MZI	2002 - 2006	ABS/TCS	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.25L	MZI	2002 - 2006	IC	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.25L	MZI	2002 - 2006	PCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.25L	MZI	2002 - 2006	RCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	ABS/TCS	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	IC	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	PCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	RCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	TCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	ABS/TCS	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	IC	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	PCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	RCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	TCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002	TCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002 - 2006	ABS/TCS	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002 - 2006	IC	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002 - 2006	PCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002 - 2006	RCM	●	●	●	●	○
MAZDA2 (Europe)	1.3L	ZJ	2007	ABS	●	●	●	●	○
MAZDA2 (Europe)	1.3L	ZJ	2007	BCM/GEM	●	●	●	●	○
MAZDA2 (Europe)	1.3L	ZJ	2007	EPS	●	●	●	●	○
MAZDA2 (Europe)	1.3L	ZJ	2007	IC	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA2 (Europe)	1. 3L	ZJ	2007	PCM	●	●	●	●	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	RKE	●	●	●	●	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	VSM	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	ABS	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	BCM/GEM	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	EPS	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	IC	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	PCM	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	RKE	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	VSM	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	ABS	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	BCM/GEM	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	EPS	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	IC	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	PCM	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	RKE	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	VSM	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	ABS	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	BCM/GEM	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	EPS	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	IC	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	PCM	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	RKE	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	VSM	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	ABS	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	EATC	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	GEM	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	IC	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	PCM	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	RCM	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	RKE	●	●	●	●	○
MAZDA3 (China / General)	2. 0L	LF	2007	ABS	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.
- ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA3 (China / General)	2.0L	LF	2007	EATC	●	●	●	●	○
MAZDA3 (China / General)	2.0L	LF	2007	EPS	●	●	●	●	○
MAZDA3 (China / General)	2.0L	LF	2007	GEM	●	●	●	●	○
MAZDA3 (China / General)	2.0L	LF	2007	IC	●	●	●	●	○
MAZDA3 (China / General)	2.0L	LF	2007	PCM	●	●	●	●	○
MAZDA3 (China / General)	2.0L	LF	2007	RCM	●	●	●	●	○
MAZDA3 (China / General)	2.0L	LF	2007	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003 - 2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003 - 2006	PCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.3L	ZJ	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	EPS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	FACM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	PCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Y6	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003 - 2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003 - 2006	PCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1.6L	Z6	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	EPS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	PCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	LF	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	FFH	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	PCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	ABS	●	●	●	●	001E
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	EPS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	PCM	●	●	●	●	0009
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	PCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	RKE	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006	PCM	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006	RKE	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006	TPM	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006 - 2012	ABS	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006 - 2012	GEM	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006 - 2012	IC	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006 - 2012	RCM	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	ABS	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	EPS	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	GEM	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	IC	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	PCM	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	RCM	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 - 2009	TPM	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2006	EATC	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2006	RKE	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	ABS	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	EATC	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	EPS	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	GEM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	IC	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	PCM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	RCM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	TPM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2006	RKE	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2006 - 2009	TCM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	ABS	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	EATC	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	GEM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	IC	●	●	●	○	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	PCM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	RCM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	TPM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	GEM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	ABS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	EATC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	EPS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	IC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	LPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	PCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	RCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	RKE	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	RPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2007	TCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	ABS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	EATC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	EPS	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	GEM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	IC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	PCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	RCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	RKE	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	LPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	RPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	TCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	ABS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	EATC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	FFH	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	GEM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	IC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	PCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	RCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	RKE	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2007	LPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2007	RPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2007	TCM	●	●	●	●	○
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	ABS	●	●	●	●	○
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	EATC	●	●	●	●	○
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	EPS	●	●	●	●	○
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	GEM	●	●	●	●	○
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	IC	●	●	●	●	○
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	PCM	●	●	●	●	○
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	RCM	●	●	●	●	○
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	TPM	●	●	●	●	○
MAZDA5 (North America Specs.)	2.3L	L3	2008 - 2010	TCM	●	●	●	●	○
MAZDA6 (China)	2.0L	LF	2007	ABS	●	●	●	●	○
MAZDA6 (China)	2.0L	LF	2007	BCM/GEM	●	●	●	●	○
MAZDA6 (China)	2.0L	LF	2007	EATC	●	●	●	●	○
MAZDA6 (China)	2.0L	LF	2007	EPS	●	●	●	●	○
MAZDA6 (China)	2.0L	LF	2007	IC	●	●	●	●	○
MAZDA6 (China)	2.0L	LF	2007	LCM	●	●	●	●	○
MAZDA6 (China)	2.0L	LF	2007	PCM	●	●	●	●	○
MAZDA6 (China)	2.0L	LF	2007	RCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (China)	2.0L	LF	2007	RKE	●	●	●	●	○
MAZDA6 (China)	2.0L	LF	2007	TCM	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	ABS	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	BCM/GEM	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	EATC	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	EPS	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	IC	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	LCM	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	PCM	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	RCM	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	RKE	●	●	●	●	○
MAZDA6 (China)	2.5L	L5	2007	TCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	ABS/TCS	●	●	●	●	001E
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	LHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	PCM	●	●	●	●	0009
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2005	RKE	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2002 - 2005	ABS/TCS	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2002 - 2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2002 - 2005	LHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2002 - 2005	PCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2002 - 2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2002 - 2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005	RKE	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005	TCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	ABS/TCS	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	FFH	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	LHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	PCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.
- ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2005	RKE	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002	4X4	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	ABS/TCS	●	●	●	●	001E
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	LHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	PCM	●	●	●	●	0009
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	TCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	RKE	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	4X4	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	ABS/TCS	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	LHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	PCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	BCM/GEM	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	EATC	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	EPS	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	IC	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	PCM	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	RVM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.
- ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (Europe and General)	1.8L	L8	2007	TCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	BCM/GEM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	EATC	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	EPS	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	IC	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	PCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	LF	2007	TCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	BCM/GEM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	EATC	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	EPS	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	FFH	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	IC	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	PCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	2.0L	RF-T	2007	TCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	BCM/GEM	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	EATC	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	EPS	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	FFH	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	IC	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	PCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	TCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.
- ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (Europe and General)	2. 5L	L5	2007	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	BCM/GEM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	EATC	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	EPS	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	IC	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	PCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	TCM	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	ABS	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	BCM/GEM	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	BSML	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	BSMR	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	EATC	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	IC	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	LCM	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	PCM	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	RCM	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	RKE	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	TCM	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	ABS	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	BCM/GEM	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	BSML	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	BSMR	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	EATC	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	IC	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	LCM	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	PCM	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	RCM	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	RKE	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	TCM	●	●	●	●	○
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	ABS	●	●	●	●	○
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	BCM/GEM	●	●	●	●	○
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	BSML	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

● This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported. ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	BSMR	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	EATC	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	IC	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	LCM	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	PCM	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	RCM	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	RKE	●	●	●	●	○
MAZDA6 (North America / General)	2.5L	L5	2009 - 2010	TCM	●	●	●	●	○
MAZDA6 (North America / General)	3.7L	CA	2009 - 2010	ABS	●	●	●	●	○
MAZDA6 (North America / General)	3.7L	CA	2009 - 2010	BCM/GEM	●	●	●	●	○
MAZDA6 (North America / General)	3.7L	CA	2009 - 2010	BSML	●	●	●	●	○
MAZDA6 (North America / General)	3.7L	CA	2009 - 2010	BSMR	●	●	●	●	○
MAZDA6 (North America / General)	3.7L	CA	2009 - 2010	EATC	●	●	●	●	○
MAZDA6 (North America / General)	3.7L	CA	2009 - 2010	IC	●	●	●	●	○
MAZDA6 (North America / General)	3.7L	CA	2009 - 2010	LCM	●	●	●	●	○
MAZDA6 (North America / General)	3.7L	CA	2009 - 2010	PCM	●	●	●	●	○
MAZDA6 (North America / General)	3.7L	CA	2009 - 2010	RCM	●	●	●	●	○
MAZDA6 (North America / General)	3.7L	CA	2009 - 2010	RKE	●	●	●	●	○
MAZDA6 (North America / General)	3.7L	CA	2009 - 2010	TCM	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3	2003 - 2008	ABS/TCS	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3	2003 - 2008	IC	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3	2003 - 2008	PCM	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3	2003 - 2008	RCM	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3	2003 - 2008	TCM	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3	2006 - 2008	GEM	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3	2008	TPM	●	●	●	○	○
MAZDA6(North America/General)	2.3L	L3_T	2006 - 2007	4X4	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3_T	2006 - 2007	ABS/TCS	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3_T	2006 - 2007	GEM	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3_T	2006 - 2007	IC	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3_T	2006 - 2007	PCM	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3_T	2006 - 2007	RCM	●	●	●	●	○
MAZDA6(North America/General)	2.3L	L3_T	2006 - 2007	RKE	●	●	●	●	○
MAZDA6(North America/General)	3.0L	AJ	2003 - 2008	PCM	●	●	●	●	○
MAZDA6(North America/General)	3.0L	AJ	2003 - 2008	TCM	●	●	●	●	○
MAZDA6(North America/General)	3.0L	AJ	2003 - Other	ABS/TCS	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (North America/General)	3.0L	AJ	2003 - Other	IC	●	●	●	●	○
MAZDA6 (North America/General)	3.0L	AJ	2003 - Other	RCM	●	●	●	●	○
MAZDA6 (North America/General)	3.0L	AJ	2006 - 2008	GEM	●	●	●	●	○
MAZDA6 (North America/General)	3.0L	AJ	2008	TPM	●	●	●	○	○
MILLENNIA / EUNOS 800	2.0L	KF	1998 - 2000	ABS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.3L	KJ	1998 - 2000	ABS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.5L	KL	1998 - 2000	ABS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.5L	KL	2002	ABS/TCS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.5L	KL	2002	PCM	●	●	●	●	○
MPV (Europe/General)	2.0L	FS	1999	ABS	●	●	●	●	○
MPV (Europe/General)	2.0L	FS	1999 - 2000	PCM	●	●	●	●	○
MPV (Europe/General)	2.0L	FS	2000	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	2.0L	RF-T	2002 - 2004	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	2.0L	RF-T	2002 - 2004	FFH	●	●	●	●	○
MPV (Europe/General)	2.0L	RF-T	2002 - 2004	PCM	●	●	●	●	○
MPV (Europe/General)	2.3L	L3	2002	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	2.3L	L3	2002	PCM	●	●	●	●	○
MPV (Europe/General)	2.5L	GY	1999 - 2000	ABS	●	●	●	●	○
MPV (Europe/General)	2.5L	GY	1999 - 2000	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	2.5L	GY	1999 - 2000	PCM	●	●	●	●	00C5 00C6
MPV (Europe/General)	3.0L	AJ	2002	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	3.0L	AJ	2002	PCM	●	●	●	●	○
MPV (Europe/General)	3.0L	AJ	2002	TCM	●	●	●	●	○
MPV (JPN/General)	2.0L	FS	1999	ABS	●	●	●	●	○
MPV (JPN/General)	2.0L	FS	1999	PCM	●	●	●	●	○
MPV (JPN/General)	2.3L	L3	2002 - 2004	ABS/TCS	●	●	●	●	○
MPV (JPN/General)	2.3L	L3	2002 - 2004	PCM	●	●	●	●	00C5 00C6
MPV (JPN/General)	2.5L	GY	1999	ABS	●	●	●	●	○
MPV (JPN/General)	2.5L	GY	1999	PCM	●	●	●	●	00C5 00C6
MPV (JPN/General)	3.0L	AJ	2002 - 2004	ABS/TCS	●	●	●	●	○
MPV (JPN/General)	3.0L	AJ	2002 - 2004	PCM	●	●	●	●	○
MPV (JPN/General)	3.0L	AJ	2002 - 2004	TCM	●	●	●	●	○
MPV (North America / General)	2.5L	GY	2000 - 2001	ABS/TCS	●	●	●	●	○
MPV (North America / General)	2.5L	GY	2000 - 2001	PCM	●	●	●	●	00C5 00C6
MPV (North America / General)	3.0L	AJ	2002 - 2006	ABS/TCS	●	●	●	●	○
MPV (North America / General)	3.0L	AJ	2002 - 2006	PCM	●	●	●	●	00C5 00C6

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MPV (North America / General)	3.0L	AJ	2002 - 2006	TCM	●	●	●	●	00C5
MPV (North America / General)	3.0L	AJ	2004 - 2006	RCM	●	●	●	●	○
MPV (North America / General)	3.0L	JE	1997 - 1999	PCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	4X4	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	ABS	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	AM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	GEM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	HCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	IC	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	ICCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	LCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	LPSDM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	LTM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	PCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	RCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	RKE	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	RPSDM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	TCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	4X4	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	ABS	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	AM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	GEM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	HCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	IC	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	ICCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	LCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	LPSDM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	LTM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	PCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	RCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	RKE	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	RPSDM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	TCM	●	●	●	○	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	ABS	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	AM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	GEM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	HCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	ICCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	LCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	LPSDM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	LTM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	RCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	RKE	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	RPSDM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	TCM	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	1.8L	L8	2005	TCM	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	1.8L	L8	2005 - 2008	ABS	●	●	●	●	001E
MX-5 (Europe / General_ Specs.)	1.8L	L8	2005 - 2008	IC	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	1.8L	L8	2005 - 2008	PCM	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	1.8L	L8	2005 - 2008	RCM	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	1.8L	L8	2005 - 2008	RHT	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	1.8L	L8	2005 - 2008	RKE	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	2.0L	LF	2005 - 2008	ABS	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	2.0L	LF	2005 - 2008	IC	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	2.0L	LF	2005 - 2008	PCM	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	2.0L	LF	2005 - 2008	RCM	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	2.0L	LF	2005 - 2008	RHT	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	2.0L	LF	2005 - 2008	RKE	●	●	●	●	○
MX-5 (Europe / General_ Specs.)	2.0L	LF	2005 - 2008	TCM	●	●	●	●	○
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	ABS	●	●	●	●	0005
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	IC	●	●	●	●	0005
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	PCM	●	●	●	●	○
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	RCM	●	●	●	●	0005
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	RKE	●	●	●	●	0005
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	TCM	●	●	●	●	○
MX-5 (North America / General Specs.)	2.0L	LF	2007 - 2010	RHT	●	●	●	●	○
MX-5 MIATA	1.8L	BP	1997 - 2005	PCM	●	●	●	●	○
MX-5 MIATA	1.8L	BP	2001 - 2005	ABS/TCS	●	●	●	●	○
MX-5 MIATA	1.8L	BP Turbo	2004	ABS/TCS	●	●	●	●	○
MX-5 MIATA	1.8L	BP Turbo	2004	PCM	●	●	●	●	○
MX_5	1.6L	B6	2000	ABS/TCS	●	●	●	●	○
MX_5	1.6L	B6	2000	PCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MX_5	1.8L	BP	2000	ABS/TCS	●	●	●	●	○
MX_5	1.8L	BP	2000	PCM	●	●	●	●	○
Millenia	2.3L	KJ	1997 - 2001	PCM	●	●	●	●	○
Millenia	2.3L	KJ	2000 - 2001	ABS/TCS	●	●	●	●	○
Millenia	2.5L	KL	1997 - 2001	PCM	●	●	●	●	○
Millenia	2.5L	KL	2000 - 2001	ABS/TCS	●	●	●	●	○
PREMACY	1.8L	FP	1999	ABS	●	●	●	●	○
PREMACY	1.8L	FP	2000	ABS/TCS	●	●	●	●	○
PREMACY	1.8L	FP	2000	PCM	●	●	●	●	○
PREMACY	2.0L	FS	2001	ABS	●	●	●	●	○
PREMACY	2.0L	FS	2001	ABS/TCS	●	●	●	●	○
PREMACY	2.0L	FS	2001	PCM	●	●	●	●	○
PREMACY	2.0L	RF-T	1999 - 2000	ABS	●	●	●	●	○
PREMACY	2.0L	RF-T	1999 - 2003	PCM	●	●	●	●	○
PREMACY	2.0L	RF-T	2000 - 2003	ABS/TCS	●	●	●	●	○
PREMACY / IXION	1.8L	FP	1999	ABS	●	●	●	●	○
PREMACY / IXION	1.8L	FP	1999 - 2002	PCM	●	●	●	●	○
PREMACY / IXION	1.8L	FP	2002	ABS/TCS	●	●	●	●	○
PREMACY / IXION	1.8L	FP_DE	1999	ABS	●	●	●	●	○
PREMACY / IXION	1.8L	FP_DE	1999	PCM	●	●	●	●	○
PREMACY / IXION	2.0L	FS	2001	ABS/TCS	●	●	●	●	○
PREMACY / IXION	2.0L	FS	2001	PCM	●	●	●	●	○
PREMACY / IXION	2.0L	RF-T	1999	ABS	●	●	●	●	○
PREMACY / IXION	2.0L	RF-T	1999	PCM	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	Other	4X4	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	Other	ABS	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	Other	ACU	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	Other	BCM/GEM	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	Other	EATC	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	Other	EPS	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	Other	IC	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	Other	LPSDM	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	Other	PCM	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	Other	RCM	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	Other	RKE	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	Other	RPSDM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
PREMACY / MAZDA5	1.6L	V6	Other	TCM	●	●	●	●	○
PREMACY / MAZDA5	1.8L	L8	Other	ABS	●	●	●	●	001E
PREMACY / MAZDA5	1.8L	L8	Other	ACU	●	●	●	●	○
PREMACY / MAZDA5	1.8L	L8	Other	BCM/GEM	●	●	●	●	○
PREMACY / MAZDA5	1.8L	L8	Other	EATC	●	●	●	●	○
PREMACY / MAZDA5	1.8L	L8	Other	EPS	●	●	●	●	○
PREMACY / MAZDA5	1.8L	L8	Other	IC	●	●	●	●	001A
PREMACY / MAZDA5	1.8L	L8	Other	LPSDM	●	●	●	●	○
PREMACY / MAZDA5	1.8L	L8	Other	PCM	●	●	●	●	0009
PREMACY / MAZDA5	1.8L	L8	Other	RCM	●	●	●	●	○
PREMACY / MAZDA5	1.8L	L8	Other	RKE	●	●	●	●	○
PREMACY / MAZDA5	1.8L	L8	Other	RPSDM	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	4X4	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	ABS	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	ACU	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	BCM/GEM	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	EATC	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	EPS	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	IC	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	LPSDM	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	PCM	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	RCM	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	RKE	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	RPSDM	●	●	●	●	○
PREMACY / MAZDA5	2.0L	LF	Other	TCM	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	ABS	●	●	●	●	001E
PREMACY / MAZDA5	2.5L	L5	Other	ACU	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	BCM/GEM	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	EATC	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	EPS	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	IC	●	●	●	●	001A
PREMACY / MAZDA5	2.5L	L5	Other	LPSDM	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	PCM	●	●	●	●	0009
PREMACY / MAZDA5	2.5L	L5	Other	RCM	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	RKE	●	●	●	●	○
PREMACY / MAZDA5	2.5L	L5	Other	RPSDM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
PROTEGE	2.0L	FS_T	2003	ABS/TCS	●	●	●	●	○
PROTEGE	2.0L	FS_T	2003	PCM	●	●	●	●	○
ROADSTER / MX-5	1.6L	B6	2000	ABS	●	●	●	●	○
ROADSTER / MX-5	1.6L	B6	2002	ABS/TCS	●	●	●	●	○
ROADSTER / MX-5	1.6L	B6	2002	PCM	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP	2000	ABS	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP	2002	ABS/TCS	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP	2002	PCM	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP Turbo	2003	ABS/TCS	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP Turbo	2003	PCM	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	ABS	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	IC	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	PCM	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	RCM	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	RHT	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	RKE	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	TCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	ABS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	ABS/TCS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	EPS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	IC	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	LCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	PCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	RCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	RKE	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	SASM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	TCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	ABS/TCS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	EPS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	IC	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	PCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	RCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	RKE	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	SASM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	TCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	ABS/TCS	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	EPS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	IC	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	PCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	RCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	RKE	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	SASM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	TCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	ABS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	ABS/TCS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	EPS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	IC	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	LCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	PCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	RCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	RKE	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	SASM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	TCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	TPM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	ABS/TCS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	EPS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	IC	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	PCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	RCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	RKE	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	SASM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	TPM	●	●	●	○	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2006 - 2008	TCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	ABS/TCS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	EPS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	IC	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	PCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	RCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	RKE	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	SASM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	TCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	TPM	●	●	●	○	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger	2.3L	DURATEC-HE / I4	2009	4X4	●	●	●	●	○
Ranger	2.3L	DURATEC-HE / I4	2009	ABS/TCS	●	●	●	●	0008
Ranger	2.3L	DURATEC-HE / I4	2009	GEM	●	●	●	●	○
Ranger	2.3L	DURATEC-HE / I4	2009	IC	●	●	●	●	0009
Ranger	2.3L	DURATEC-HE / I4	2009	PCM	●	●	●	●	0023 0025
Ranger	2.3L	DURATEC-HE / I4	2009	RCM	●	●	●	●	○
Ranger	2.3L	DURATEC-HE / I4	2009	TBM	●	●	●	●	○
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	ABS/TCS	●	●	●	●	0008
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	ESOF	●	●	●	●	○
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	PCM	●	●	●	●	0009 0023 0025
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●	○	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●	○	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	○	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	●	●	●	○	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2007	GEM	●	●	●	●	000A
Ranger / Mazda B Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2009	ABS/TCS	●	●	●	●	0008
Ranger / Mazda B Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2011	4X4	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2011	IC	●	●	●	●	0009
Ranger / Mazda B Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2011	PCM	●	●	●	●	0009 0023 0025 0010 0028 0031 0033
Ranger / Mazda B Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2011	RCM	●	●	●	●	000C
Ranger / Mazda B Series / Courier	2.3L	DURATEC-HE / I4	2005	TPM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.3L	DURATEC-HE / I4	2007 - 2011	OCSM	●	●	●	○	000C
Ranger / Mazda B Series / Courier	2.3L	DURATEC-HE / I4	2007 - 2011	SDARS	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.3L	DURATEC-HE / I4	2008 - 2011	GEM / SJB	●	●	●	●	000A 0042
Ranger / Mazda B Series / Courier	2.3L	DURATEC-HE / I4	2010 - 2011	ABS	●	●	●	●	0008 0012

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B Series / Courier	2.3L	OHC	1995 - 1997	ABS/TCS	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.3L	OHC	1995 - 1997	GEM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.3L	OHC	1995 - 1997	PCM	●	●	●	●	0023 0025
Ranger / Mazda B Series / Courier	2.3L	OHC	1995 - 1997	RAP	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.3L	OHC	1996 - 1997	IAB	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.3L	Other	1996 - 2003	ABS/TCS	●	●	●	●	0008
Ranger / Mazda B Series / Courier	2.3L	Other	1996 - 2003	GEM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.3L	Other	1996 - 2003	PCM	●	●	●	●	0023 0025 0009 0010 0028 0031 0033
Ranger / Mazda B Series / Courier	2.3L	Other	2001	PATS	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.3L	Other	2001 - 2003	4X4	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.3L	Other	2001 - 2003	RAP	●	●	●	●	000A 000F
Ranger / Mazda B Series / Courier	2.3L	Other	2001 - 2003	RCM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	ABS	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	ACM	●	●	●	○	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	BCMii	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	DDM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	HVAC	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	IPC	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	PAM	●	●	●	○	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	PCM	●	●	●	●	0025
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	PDM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	RCM	●	●	●	○	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	SRM	●	●	●	○	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	TBM	●	●	●	○	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	TCM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	DURATEC-HE / I4	2011	TRM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	Other	1998	IAB	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	Other	1998 - 2001	ABS/TCS	●	●	●	●	0008
Ranger / Mazda B Series / Courier	2.5L	Other	1998 - 2001	GEM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	Other	1998 - 2001	PCM	●	●	●	●	0023 0025 0010 0028 0031 0033
Ranger / Mazda B Series / Courier	2.5L	Other	1998 - 2001	RAP	●	●	●	●	000A
Ranger / Mazda B Series / Courier	2.5L	Other	1999 - 2001	PATS	●	●	●	●	0009
Ranger / Mazda B Series / Courier	2.5L	Other	1999 - 2001	RCM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.5L	Other	2001	4X4	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B Series / Courier	2.8L	Other	2001	4X4	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.8L	Other	2001	ABS/TCS	●	●	●	●	0008
Ranger / Mazda B Series / Courier	2.8L	Other	2001	GEM	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.8L	Other	2001	PATS	●	●	●	●	○
Ranger / Mazda B Series / Courier	2.8L	Other	2001	PCM	●	●	●	●	0009
Ranger / Mazda B Series / Courier	2.8L	Other	2001	RAP	●	●	●	●	000A
Ranger / Mazda B Series / Courier	2.8L	Other	2001	RCM	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.0L	FFV	1999 - 2000	ABS/TCS	●	●	●	●	0008
Ranger / Mazda B Series / Courier	3.0L	FFV	1999 - 2000	GEM	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.0L	FFV	1999 - 2000	PATS	●	●	●	●	0009
Ranger / Mazda B Series / Courier	3.0L	FFV	1999 - 2000	PCM	●	●	●	●	0010 0023 0025 0028 0031 0033
Ranger / Mazda B Series / Courier	3.0L	FFV	1999 - 2000	RAP	●	●	●	●	000A
Ranger / Mazda B Series / Courier	3.0L	FFV	1999 - 2000	RCM	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.0L	Other	1995 - 2003	RAP	●	●	●	●	000A
Ranger / Mazda B Series / Courier	3.0L	Other	1995 - 2007	GEM	●	●	●	●	000A
Ranger / Mazda B Series / Courier	3.0L	Other	1995 - 2008	ABS/TCS	●	●	●	●	0008
Ranger / Mazda B Series / Courier	3.0L	Other	1995 - 2008	PCM	●	●	●	●	0023 0025 0010 0028 0031 0033 0009
Ranger / Mazda B Series / Courier	3.0L	Other	1996 - 1998	IAB	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.0L	Other	1999 - 2008	RCM	●	●	●	●	000C
Ranger / Mazda B Series / Courier	3.0L	Other	2000 - 2001	PATS	●	●	●	●	0009
Ranger / Mazda B Series / Courier	3.0L	Other	2001 - 2008	4X4	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.0L	Other	2004 - 2008	IC	●	●	●	●	0009
Ranger / Mazda B Series / Courier	3.0L	Other	2005	TPM	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.0L	Other	2007 - 2008	OCSM	●	●	●	○	000C
Ranger / Mazda B Series / Courier	3.0L	Other	2007 - 2008	SDARS	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.0L	Other	2008	GEM / SJB	●	●	●	●	000A 0042
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●	○	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●	○	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	○	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	●	●	●	○	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	●	○
Ranger / Mazda B Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Ranger / Mazda B Series / Courier	4.0L	Other	1995 - 2002	ABS/TCS	●	●	●	●	0008
Ranger / Mazda B Series / Courier	4.0L	Other	1995 - 2002	GEM	●	●	●	●	○
Ranger / Mazda B Series / Courier	4.0L	Other	1995 - 2002	PCM	●	●	●	●	0023 0025 0010 0028 0031 0033 0009
Ranger / Mazda B Series / Courier	4.0L	Other	1995 - 2002	RAP	●	●	●	●	000A
Ranger / Mazda B Series / Courier	4.0L	Other	1996 - 1998	IAB	●	●	●	●	○
Ranger / Mazda B Series / Courier	4.0L	Other	1999 - 2001	PATS	●	●	●	●	0009
Ranger / Mazda B Series / Courier	4.0L	Other	1999 - 2002	RCM	●	●	●	●	○
Ranger / Mazda B Series / Courier	4.0L	Other	2001 - 2002	4X4	●	●	●	●	○
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2003	RAP	●	●	●	●	000A 000F
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2003 - 2007	GEM	●	●	●	●	000A
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2003 - 2009	ABS/TCS	●	●	●	●	0008
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2003 - 2011	4X4	●	●	●	●	○
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2003 - 2011	PCM	●	●	●	●	0009 0010 0023 0025 0028 0031 0033
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2003 - 2011	RCM	●	●	●	●	000C
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2004 - 2011	IC	●	●	●	●	0009
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2005	TPM	●	●	●	●	○
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2007 - 2011	OCSM	●	●	●	○	000C
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2007 - 2011	SDARS	●	●	●	●	○
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2008 - 2011	GEM / SJB	●	●	●	●	000A 0042
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2010 - 2011	ABS	●	●	●	●	0008 0012
Ranger / Mazda B Series / Courier	Other	Other	2004	4X4	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2004	ABS/TCS	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2004	GEM	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2004	IC	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2004	PCM	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2004 - 2011	RCM	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2011	ABS	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2011	ACM	●	●	●	○	○
Ranger / Mazda B Series / Courier	Other	Other	2011	BCMii	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B Series / Courier	Other	Other	2011	DDM	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2011	HVAC	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2011	IPC	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2011	PAM	●	●	●	○	○
Ranger / Mazda B Series / Courier	Other	Other	2011	PDM	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2011	SRM	●	●	●	○	○
Ranger / Mazda B Series / Courier	Other	Other	2011	TBM	●	●	●	○	○
Ranger / Mazda B Series / Courier	Other	Other	2011	TCM	●	●	●	●	○
Ranger / Mazda B Series / Courier	Other	Other	2011	TRM	●	●	●	●	○
SCRUM	660cc	F6A	1999 - Other	ABS	●	●	●	●	○
SCRUM	660cc	F6A	1999 - Other	PCM	●	●	●	●	○
SCRUM	660cc	F6A	1999 - Other	RCM	●	●	●	●	○
SCRUM	660cc	F6A-T	1999 - Other	ABS	●	●	●	●	○
SCRUM	660cc	F6A-T	1999 - Other	PCM	●	●	●	●	○
SCRUM	660cc	F6A-T	1999 - Other	RCM	●	●	●	●	○
SCRUM	660cc	F6A-T	1999 - Other	TCM	●	●	●	●	○
SCRUM	660cc	K6A	2001 - Other	ABS	●	●	●	●	○
SCRUM	660cc	K6A	2001 - Other	PCM	●	●	●	●	○
SCRUM	660cc	K6A	2001 - Other	RCM	●	●	●	●	○
SCRUM	660cc	K6A_T	2001 - Other	ABS	●	●	●	●	○
SCRUM	660cc	K6A_T	2001 - Other	PCM	●	●	●	●	○
SCRUM	660cc	K6A_T	2001 - Other	RCM	●	●	●	●	○
SCRUM	660cc	K6A_T	2001 - Other	TCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	ABS	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	PCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	RCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	ABS	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	PCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	RCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	TCM	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A	2003 - Other	ABS	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A	2003 - Other	PCM	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A	2003 - Other	RCM	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	ABS	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	PCM	●	●	●	●	○

MaxiDas_Mazda_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.
- ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
SCRUM_(2003 / 9 -)	660cc	K6A_T	2003 - Other	RCM	●	●	●	●	○
SCRUM_(2003 / 9 -)	660cc	K6A_T	2003 - Other	TCM	●	●	●	●	○
SENTIA	3.0L	JE	1997	PCM	●	●	●	●	○
SENTIA	3.0L	JE_HO	1997	PCM	●	●	●	●	○
TITAN_DASH	2.0L	FE	2000 - 2002	PCM	●	●	●	●	○
TITAN_DASH	2.0L	FE	2002	TCM	●	●	●	●	○
TITAN_DASH	2.0L	FE LPG	2002	PCM	●	●	●	●	○
TITAN_DASH	2.0L	FE LPG	2002	TCM	●	●	●	●	○
TITAN_DASH	2.0L	RF-T	2004	PCM	●	●	●	●	○
TITAN_DASH	2.0L	RF-T	2004	TCM	●	●	●	●	○
XEDOS9	2.0L	KF	1996	ABS	●	●	●	●	○
XEDOS9	2.3L	KJ	1996 - 1998	ABS	●	●	●	●	○
XEDOS9	2.5L	KL	1996 - 2000	ABS	●	●	●	●	○
XEDOS9	2.5L	KL	2000	ABS/TCS	●	●	●	●	○
XEDOS9	2.5L	KL	2000	PCM	●	●	●	●	○

Special Function

index	Specil Function Name
0005	Programmable Module Installation
0006	Module Reprogramming
0007	Programmable Parameters
0008	ABS Service Bleed
0009	PATS Functions
000A	Remote Keyless Entry
000B	G Sensor Calibration
000C	Passenger System Reset
000D	Neutral Position Setting
000E	Ride Height Calibration
000F	Factory Keyless Entry Code
0010	Stop Use of Transmission Adaptive
0011	Power Seat Calibration
0012	IVD Initialization Sequence
0013	Pneumatic Test
0014	Accurate Trim Test
0015	Passenger Zero Seat Weight Test
0016	Microphone Test
0017	Audio Speaker Walkaround Test
0018	Infotainment Display Test
0019	Tones Test
001A	TPMS Functions
001B	Zero Speed Test
001C	Rear Tones Test
001D	Monotones Test
001E	Sensor Initialization
001F	EPB calibration.
0020	EATC Operation Check
0021	Rain Sensor Reset
0022	LPSDM and RPSDM Service Function
0023	Power Balance
0024	EVAP Test
0025	Reset PCM KAM
0026	OBDII Modes
0027	Clear Transmission Adaptive Learning
0028	Clear Transmission Adaptive Tables
0029	Configure All Three Sensors Together.
002A	Configure Both the Yaw Rate Sensor and the Lateral Acceleration Sensors.
002B	Configure the lateral acceleration sensor.
002C	Configure the pressure sensor.
002D	FFH SelfTest and Prefill Utility
002E	FFH Start Heater Utility
002F	FFH Unlock Utility
0030	Auxiliary vehicle ID reset
0031	Halt Transmission Adaptive Learning
0032	Headlamp Alignment
0033	Resume Transmission Adaptive Learning
0034	Resume Transmission Adaptive Tables
0035	Keyfob Training
0036	Transmission
0037	Transmission Learning
0038	Transmission Solenoid Body IDN
0039	VSM Service Functions

Special Function

index	Specil Function Name
003A	A/C Test
003B	ACM
003C	ACM Security Bypass Test
003D	Air/Fuel Learning
003E	AM Antenna Reception Sensitivity Test
003F	ASM Service Functions
0040	audio configuration
0041	Auto Leveling Sensor Re-zero Procedure
0042	Tire pressure monitoring system
0043	BSM Radar Test
0044	Button Test
0045	CAN Bus Fault Test
0046	CCM Calibration
0047	Clear EGR Adaptive Tables
0048	Clear Fuel Injector & HP Pump Adaptive Tables
0050	Clearing of Learning Value
0051	Component/Parameter Reset
0053	Configure the steering angle sensor.
0054	Configure the yaw rate sensor.
0055	Data Reset
0056	DPF
0057	DPF Component Parameter
0058	DPF Manual Regeneration
0059	DPF Parameter Reset
005A	Electronic Throttle Control
005B	EPS Steering Angle Calibration
005C	ETB/EGR Initialization
005D	FACM
005E	FFH Operation Check
005F	Gauge Test
0060	ICCM Aiming Adjustment
0061	Illumination Test
0062	Input and Data Test
0063	Interior Scan Test
0064	Keyless Entry Keypad Code Reset
0065	Learning
0066	Misfire Check
0067	Misfire Monitor Neutral Profile Correction
0068	Module Identification
0069	Multifunction Output Test
006A	Network Test
006B	New FACM
006C	Parking Aid Switch Test
006D	Passenger Seat Weight Sensor ReZero
006E	Rebalance
006F	Reset the Knock Sensor Learned Values
0070	Reset Transmission Tables
0071	Resetting adaptive values
0072	RVM Aiming
0074	Service Routine
0075	Special Ignition ON
0076	Steering angle sensor calibration
0077	Supplemental Heater Test
0080	Mode 1 Powertrain Data

Special Function

index	Specil Function Name
0081	Mode 6 On-Board Test Results
0082	Mode 8 - On-Board device control
0083	Mode 9 - Vehicle Information
0084	OBD Drive Cycle
0085	Service Functions
0090	Diesel Particulate Filter Static Regeneration
0091	DPF Regeneration Suspension
0092	Fuel Injector Correction Factors
0093	IQA
0094	Refill the FAT.
0095	Relearn Vehicle Data
0096	Reset Charge Air Cooler Bypass Valve Position Offset.
0097	Reset the Cooling Fan Motor Learned Values
0098	Reset the Diesel Particulate Filter Learned Values
0099	Reset the Exhaust Gas Recirculation Valve Learned Values
009A	Reset the Intake Air Throttle Valve Learned Values
009B	Reset / Clear Specified Function
009C	SCR Dosing Measurement Test
009D	SCR Parameter Reset
009E	SCR System Emptying
009F	SCR System Refill Activation
00A0	SCR Visual Leak Check
00A1	System Prime
00A2	WIF Reset
00A3	DPF Reset
00A4	Enter the Fuel Injector Default Count Value
00A5	Clutch Switch Learn
00A6	Engine Oil Quality History
00A7	Fuel Injection Pump Learn
00A8	Fuel Injector Pilot Correction Learn
00A9	Fuel System Leak Test
00AA	Initialize the Exhaust Gas Related Component.
00AB	Reset Differential Pressure Sensor Learned Values
00AC	Reset KAM
00AD	Reset MAF Sensor Drift.
00AE	Reset MAF Sensor Offset.
00AF	Reset the air conditioning compressor learned values.
00B0	Reset the Diesel Particulate Filter Differential Pressure Sensor Learned Values
00B1	Reset the Exhaust Gas Temperature Value
00B2	Reset the Fuel Injection Pump Learned Values
00B3	Reset the Fuel Injector Learned Values
00B4	Reset the Fuel Metering Valve Learned Values
00B5	Reset the Fuel Pressure Relief Valve Open Count Learned Value
00B6	Reset the Fuel Pressure Relief Valve Open Duration Learned Value
00B7	Reset the Fuel Rail Pressure Sensor Learned Values
00B8	Reset the Heated Exhaust Gas Oxygen Sensor Learned Values
00B9	Reset the Mass Air Flow Sensor Learned Values
00BA	Reset the Neutral Gear Position Learned Value
00BB	Reset the oil change indicator.
00BC	Reset the Powertrain Control Module Learned Values
00BD	Reset the Turbocharger Learned Values.
00BE	Reset the Turbocharger Variable Vane Actuator Learned Values

Special Function

index	Specil Function Name
00BF	Reset the Turbocharger Variable Vane Position Sensor Learned Values
00C0	Reset the Vehicle Speed Limit
00C1	Reset the water in fuel Warning Indicator.
00C2	rpm Controller
00C3	Stop-Start Activation
00C4	Speed Limiting
00C5	TR Sensor Test
00C6	Transmission Fluid Level Test
00C7	Automatic Transmission PRNDL Display Test
00C8	BSI Solenoid Test
00C9	Automatic Transmission Park Switch Test
00CA	ABS reset and configuration.
00CB	PDC Reset
00CC	Steering Wheel Position Sensor Calibration
00CD	Preliminary Checks
00CE	Reset TCM KAM
00CF	Fuel System Prime
00D0	Remote Start
00D1	TBM SIM RAV_ID
00D2	Reset TBM Password
00D3	TBM Transit Mode
00D4	CEI Lock Configuration
00D5	BMS Reset
00D6	Navigation
00D7	Calibrate Steering Angle Sensor
00D8	Configure the steering column assembly
00D9	Configure the longitudinal acceleration sensor
00DA	Configure the intermediate shaft
00DB	Module Initialization
00DC	Pull Drift Compensation
00DD	Calibrate Longitudinal Acceleration Sensor
00DE	Inhibit longitudinal accelerometer monitoring
00DF	Pull Drift Compensation enable/disable
00E0	Straight Ahead Adaption Angle Reset
00E1	Steering Rack Limiter Configuration
00E2	Pressure Sensor Calibration
00E3	Reset Pressure Sensor Offset
00E4	Enable/Disable hill launch assist
00E5	Camera Alignment
00E6	Shift fork system learn.
00E7	Reset the High Pressure Fuel System Learned Values
00E8	BleedMASTER
00E9	FCDIM_Keycode_reset
00EA	EPB
0101	Audio
0102	Battery saver
0103	Body Type
0104	Courtesy Lamp
0105	Door Trigger Disable Mode
0106	Body and Fuel Type
0107	Hazard Warning
0108	Horn Warning
0109	Master Door Trigger Disable Mode

Special Function

index	Specil Function Name
010A	Panic Alarm
010B	Police Mode
010C	Traction control system
010D	Autolamp Off Setting
010E	Autolamp On Setting
010F	Police Speedometer Offset
0110	Cabin Temperature Sensor Calibration Factor
0111	Taxi Mode
0112	Low Coolant Warning
0113	Parking Brake Warning
0114	Headlamp Delay Door Open
0115	Headlamp Delay Ignition Off
0116	Headlamp Delay Remote Lock Pressed
0117	Dynamic Stability Control
0118	Hill Descent Control LED
0119	Brake System Configuration
011A	BPM fitted
011B	Camera fitted
011C	Audio Interface Module
011D	Sonar fitted
011E	Navigation System
011F	Parking Aid Module
0120	Odometer Write
0121	Subwoofer
0122	Driver Beltminder Status
0123	Alarm
0124	Audio Configure