

#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

Vehicle Type	System Name	Ecu Info	Read Codes	Erase Codes	Live Data	Actuator	Function Test	Read Config	Special_Function
AVANTIME	A. B. S.	•	•	•	•	•	•	0	0325, 0438, 0367, 0329, 0286, 0287
AVANTIME	AIR CONDITIONING	•	•	•	•	0	•	•	0031, 0032, 0033, 0034, 0127, 0128
AVANTIME	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0175, 0319, 0288, 0205, 0352, 0438, 0442
AVANTIME	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	0458, 0445, 0443, 0442
AVANTIME	CONNECTION UNIT	•	•	•	•	•	•	•	0002, 0016, 0282, 0028, 0107, 0553, 0566, 0156, 0577
AVANTIME	DISCHARGE LAMP	•	•	•	•	•	0	0	
AVANTIME	HEATER	•	•	•	•	•	•	0	
AVANTIME	IMMOBILISER	•	•	•	•	•	•	•	0002, 0016, 0282, 0028, 0107, 0553, 0566, 0156, 0577
AVANTIME	INJECTION	•	•	•	•	•	•	*	0277, 0442, 0179, 0079, 0407, 0434, 0379, 0412, 0454, 0119 , 0114, 0428, 0399, 0382, 0415, 0013
AVANTIME	INSTRUMENT PANEL	•	•	•	•	•	•	•	0002, 0016, 0282, 0028, 0107, 0553, 0566, 0156, 0577
AVANTIME	LIGHTING	•	•	•	•	•	0	0	
CLIO 2	A. B. S.	•	•	•	•	•	*	*	0438, 0325, 0039, 0367,
CLIO 2	AIR CONDITIONING	•	•	•	•	•	•	0	0391, 0422, 0384, 0417, 0386, 0419, 0402, 0430, 0397, 0394, 0389, 0403, 0038, 0168, 0321, 0111, 0065, 0063, 0438
CLIO 2	AIRBAG / PRETENSIONERS	•	•	•	•	•	•	*	0437, 0395, 0425, 0208, 0354, 0064, 0438
CLIO 2	AUTOMATIC GEARBOX	•	•	•	•	•	•	*	, 0437, 0440, 0217, 0379, 0412, 0487, 0488, 0445, 0451, 047 3, 0017, 0480, 0344, 0215, 0055, 0014, 0470, 0453, 0442, 02 76, 0438
CLIO 2	CONNECTION UNIT	•	•	•	•	•	*	*	0554, 0504, 0600, 0590, 0595, 0585, 0597, 0587, 0392, 0401, 0583, 0593, 0544, 0435, 0408, 0594, 0584, 0133, 0028, 055, 0538
CLIO 2	GAS INJ.	•	•	•	•	•	•	*	0442
CLIO 2	IMMOBILISER	•	•	•	•	•	*	0	0082, 0059, 0279, 0280, 0549, 0539
CLIO 2	INJECTION	•	•	•	•	•	*	•	0381, 0414, 0173, 0172, 0179, 0079, 0277, 0212, 0393, 0442, 0366, 0398, 0427, 0412, 0270, 0333, 0379, 0340, 0013, 026 7, 0268, 0112, 0119, 0493, 0498, 0156, 0070, 0272, 0181, 01 82, 0183, 0184, 0185
CLIO III	A. B. S.	•	•	•	•	•	•	0	0056, 0039, 0325, 0442, 0438, 0126, 0367, 0273, 0022, 0125 , 0363
CLIO III	AIR CONDITIONING	•	•	•	•	•	•	•	0369, 0167, 0157, 0442



#### NOTES:

This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.  $lack \Delta$  This function is the new feature in this version.

	ATDDAG / DDD#DNGTONDDG								0288, 0387, 0371, 0432, 0100, 0261, 0251, 0252, 0092, 0093
CLIO III	AIRBAG / PRETENSIONERS			•		0		•	, 0071, 0072, 0145, 0146, 0144, 0290, 0103, 0101, 0262, 010 2, 0249, 0205, 0352, 0438, 0442, 0064, 0318
CLIO III	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	0445, 0215, 0440, 0438, 0442, 0458, 0274, 0448, 0476, 0477, 0475, 0489, 0490
CLIO III	COMMUNICATIONS UNIT	•	•	•	•	•	•	•	0567, 0517, 0088, 0503, 0535
CLIO III	INJECTION	•	•	•	•	•	•	•	0274, 0441, 0206, 0353, 0442, 0112, 0277, 0271, 0310, 0439, 0123, 0187, 0455, 0073, 0074, 0075, 0076, 0246, 0060, 0247, 0114, 0220, 0007, 0008, 0465, 0462, 0117, 0496, 0497, 0492, 0494, 0491
CLIO III	INSTRUMENT PANEL	•	•	•	•	•	•	•	0194, 0041, 0156, 0066, 0368, 0348, 0088, 0069, 0238, 0337, 0298, 0204, 0052, 0302, 0058, 0312, 0245, 0442, 0357, 0221, 0223, 0222, 0224, 0147, 0265, 0086
CLIO III	LIGHTING	•	•	•	•	•	•	•	0369, , 0505, 0521, 0563, 0518
CLIO III	MULTIMED. CONNECTION	•	•	•	•	0	•	0	0567
CLIO III	MULTIMEDIA INTERFACE	•	•	•	•	•	•	•	0484, 0552, , 0541, 0369
CLIO III	PARKING ASSISTANCE	•	•	•	•	0	•	•	0485, 0044, 0342, 0442, 0447
CLIO III	RADIO	•	•	•	•	•	•	•	
CLIO III	TYRES	•	•	•	•	0	•	•	0278, 0275, 0369, 0442, 0122, 0315
CLIO III	UCH	•	•	•	•	•	•	•	0509, 0577, 0156, 0107, 0131, 0233, 0084, 0372, 0137, 0057, 0078, 0164, , 0165, 0001, 0316, 0338, 0289
CLIO III	UPC	•	•	•	•	•	•	•	
CLIO III	VARIABLE P.A.S.	•	•	•	•	0	•	•	0330
CLIO V6	AIR CONDITIONING	•	•	•	•	•	•	0	0384, 0417, 0386, 0419, 0402, 0430, 0394, 0397, 0389, 0403, 0168, 0038, 0065, 0063
CLIO V6	AIRBAG / PRETENSIONERS	•	•	•	•	•	•	•	0208, 0354, 0064, 0438
CLIO V6	CONNECTION UNIT	•	•	•	•	•	0	0	0554, 0504, 0600, 0590, 0595, 0585, 0597, 0587, 0392, 0401, 0583, 0593, 0544, , 0435, 0408, 0594, 0584
CLIO V6	IMMOBILISER								
CLIO V6	INJECTION	•	•	•	•	•	•	0	0277
CLIO V6 PH 2	AIR CONDITIONING	•	•	•	•	•	0	0	
CLIO V6 PH 2	AIRBAG / PRETENSIONERS	•	•	•	•	0	0	•	0249, 0092, 0093, 0251, 0252, 0097, 0258, 0105, 0264, 0145, 0146, 0071, 0072, 0104, 0101, 0262, 0205, 0352, 0242
CLIO V6 PH 2	CONNECTION UNIT	•	•	•	•	•	•	•	0028
CLIO V6 PH 2	IMMOBILISER	•	•	•	•	•	•		0028



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.  $lack \Delta$  This function is the new feature in this version.

CLIO V6 PH 2	INJECTION	•	•	•	•	•	0	0277
CLI0IIP2/3/4	A. B. S.			•	•	*	*	0438, 0325, 0367, 0329, 0286, 0287, 0134, 0039,
CLI0IIP2/3/4	AIR CONDITIONING	•	•	•	•	0	0	
CLI0IIP2/3/4	AIRBAG / PRETENSIONERS	•	•	•	0	0	•	0249, 0092, 0093, 0251, 0252, 0097, 0258, 0105, 0264, 0145, 0146, 0071, 0072, 0104, 0101, 0262, 0205, 0352, 0242
CLI0IIP2/3/4	AUTOMATIC GEARBOX	•	•	•	•	•	*	0445, 0451, 0473, 0017, 0480, 0344, 0440, 0437, 0215, 0055, 0442, 0458, 0476, 0274, 0448, 0477, 0438, 0490, 0489, 0014, 0470, 0453, 0276
CLI0IIP2/3/4	CONNECTION UNIT	•	•	•	•	•	•	0028
CLI0IIP2/3/4	DISCHARGE LAMP	•	•	•	•	0	0	
CLI0IIP2/3/4	GAS INJ.		•	•	•	•	*	0442
CLI0IIP2/3/4	IMMOBILISER	•	•	•	•	*	*	0549, 0539, 0588, 0598, 0028
CLI0IIP2/3/4	INJECTION	•	•	•	•	•	*	0277, 0179, 0079, 0442, 0112, 0119, 0366, 0493, 0498, 0156, 0013, 0268, 0340, 0070, 0272, 0181, 0182, 0183, 0184, 018 5
CLI0IIP2/3/4	LIGHTING	•	• •	•	•	0	0	
CLI0IIP2/3/4	VARIABLE P.A.S.	•	•	•	0	0	0	0514, 0438
DUSTER	4 WHEELS DRIVE	•	•	•	•	•	0	0369, 0156
DUSTER	A. B. S.		•	•	•	•	0	0317, 0039, 0056, 0325, 0442, 0438, 0367
DUSTER	AIRBAG / PRETENSIONERS	•	•	•	0	•	•	0288, 0318, 0311, 0312, 0259, 0260, 0263, 0257, 0249, 0254, 0248, 0177, 0096, 0099, 0102, 0145, 0146, 0098, 0442, 035 2, 0205
DUSTER	AUTOMATIC GEARBOX	•	•	•	•	•	0	0445, 0215, 0440, 0442, 0438
DUSTER	INJECTION	•	•	•	•	•	*	0112, 0271, 0455, 0441, 0206, 0073, 0074, 0075, 0076, 0442, 0187, 0247, 0114, 0220, 0007, 0008, 0465, 0060
DUSTER	RADIO	•	•	•	•	•	•	
DUSTER	TRACKER	•	•	•	0	•	•	0571, 0019,
DUSTER	UCH	•	•	•	•	•	*	0133, 0562
DUSTER	VARIABLE P.A.S.	•	•	•	0	•	•	
ESPACE	A. B. S.	•	•	•	•	•	0	0438, 0325
ESPACE	AIR CONDITIONING	•	•	•	0	•	•	0031, 0032, 0033, 0034, 0127, 0128
ESPACE	AIRBAG / PRETENSIONERS	•	•	•	•	•	0	0438, 0432, 0405, 0420, 0388
ESPACE	AUTOMATIC GEARBOX	•	•	•	•	•	*	, 0015, 0437, 0440, 0217, 0379, 0412, 0487, 0488, 0445, 045 1, 0473, 0017, 0480, 0344, 0215, 0055



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

									Table 1
ESPACE	CONNECTION UNIT	•	•	•	•	•	*	•	0067, 0507, 0364, 0589, 0599, 0400, 0429, 0546, 0530, 0377, 0409, 0561, 0523, 0580, 0579, 0196, 0303, 0582, 0592, 039, 0421
ESPACE	DISCHARGE LAMP	•	•	•	•	•	0	0	
ESPACE	HEATER	•	•	•	•	•	•	0	
ESPACE	IMMOBILISER	•	•	•	•	•	*	*	0082, 0080, 0279, 0280, 0392, 0401, 0435, 0408, 0528
ESPACE	INJECTION	•	•	•	•	•	•	*	0381, 0414, 0173, 0172, 0277, 0379, 0412, 0398, 0427, 0340, 0013, 0267, 0179, 0079, 0407, 0385, 0418, 0379, 0412, 040 6, 0433, 0119, 0114, 0454, 0428, 0399, 0434, 0382, 0415, 04 42
ESPACE	INSTRUMENT PANEL	•	*	*	•	0	*	•	0197, 0198, 0304, 0199, 0305, 0306, 0438, 0377, 0409, 0374, 0214, 0266, 0081, 0404, 0431, 0381, 0414, 0383, 0416, 006, 0364, 0400, 0429, 0196, 0303, 0226, 0225, 0390, 0421
ESPACE	LIGHTING	•	•	•	•	•	0	0	
ESPACE IV	A. B. S.	•	•	•	•	•	•	•	0056, 0367, 0003, 0156, 0325, 0438, 0442, 0328, 0345, 0043, 0273, 0022, 0054, 0169
ESPACE IV	AIR CONDITIONING	•	•	•	•	•	•	•	0016, 0062, 0020, 0090, 0107, 0294, 0010, 0442, 0167, 0157 , , 0343
ESPACE IV	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0288, 0064, 0175, 0319, 0205, 0352, 0438, 0442, 0318
ESPACE IV	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	0445, 0443, 0442, 0438, 0472
ESPACE IV	DISCHARGE LAMP	•	•	•	•	•	•	•	0369, 0514
ESPACE IV	HANDS-FREE KIT	•	•	•	•	•	•	•	
ESPACE IV	HEATER	•	•	•	•	•	•	0	
ESPACE IV	INJECTION	•	•	•	•	•	•	*	0277, 0179, 0079, 0442, 0274, 0441, 0151, 0332, 0018, 0353 , 0206, 0112, 0117, 0455, 0310, 0439, 0340, 0013
ESPACE IV	INSTRUMENT PANEL	•	•	•	•	•	•	•	0369, 0195, 0152, 0088, 0066, 0349, 0339, 0344, 0025, 0069, 0348, 0370, 0238, 0213, 0158, 0358, 0359, 0235, 0236, 0178, 0442, 0085, 0156, 0005, 0204, 0245, 0227, 0230, 0243, 0083, 0068, 0265
ESPACE IV	PARKING ASSISTANCE	•	•	•	•	0	•	•	0485, 0044, 0342, 0442
ESPACE IV	PARKING BRAKE	•	•	•	•	•	•	•	0483, 0309, 0436, 0484, 0442



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

▲ This function is the new feature in this version.

ESPACE IV	UCH	•	•	•	•	•	•	•	0135, 0512, 0162, 0012, 0351, 0049, 0207, 0275, 0278, 0369, 0365, 0156, 0107, 0347, 0238, 0346, 0077, 0283, 0203, 0204, 0164, 0314, 0050, 0160, 0159, 0161, 0078, 0023, 0021, 0115, 0316, 0180, 0335, 0165, 0211, 0360, 0442, 0122
ESPACEIV PH2	A. B. S.	•	•	•	•	•	•	•	0328, 0345, 0043, 0056, 0156, 0442, 0325, 0367, 0438, 0273, 0022, 0054, 0169
ESPACEIV PH2	AIR CONDITIONING	•	•	•	•	•	•	•	0016, 0062, 0020, 0090, 0107, 0294, 0010, 0167, 0157, 0442 , , 0343
ESPACEIV PH2	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0288, 0064, 0175, 0318, 0205, 0352, 0438, 0442
ESPACEIV PH2	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	0445, 0443, 0442, 0438, 0472, 0458, 0456
ESPACEIV PH2	COMMUNICATIONS UNIT	•	•	•	•	•	•	•	0369, 0567, 0517, 0088, 0503, 0535
ESPACEIV PH2	HEATER	•	•	•	•	•	•	0	
ESPACEIV PH2	INJECTION	•	•	•	•	•	•	*	0274, 0442, 0353, 0206, 0112, 0117, 0310, 0439, 0455, 0340, 0013, 0441, 0079, 0179, 0277, 0018, 0332, 0331, 0151, 027 2, 0110, 0045, 0187, 0220
ESPACEIV PH2	INSTRUMENT PANEL	•	•	•	•	•	•	•	0195, 0156, 0152, 0005, 0344, 0348, 0088, 0238, 0204, 0349, 0069, 0245, 0243, 0083, 0227, 0068, 0230, 0442, 0265
ESPACEIV PH2	LIGHTING	•	•	•	•	•	•	•	0369, 0107, 0505, 0563, 0083, 0540,
ESPACEIV PH2	MULTIMED. CONNECTION	•	•	•	•	0	•	0	0567
ESPACEIV PH2	MULTIMEDIA INTERFACE	•	•	•	•	•	•	•	0369, 0484
ESPACEIV PH2	PARKING ASSISTANCE	•	•	•	•	0	•	•	0485, 0044, 0342, 0442, 0447
ESPACEIV PH2	PARKING BRAKE	•	•	•	•	•	•	•	0483, 0309, 0436, 0484, 0442
ESPACEIV PH2	PARKING PROX CAN	•	•	•	•	0	•	•	0485, 0044, 0342, 0459, 0460, 0442, 0447, 0438
ESPACEIV PH2	RADIO	•	•	•	•	•	•	•	0510, 0088,
ESPACEIV PH2	UCH	•	•	•	•	•	•	•	0135, 0512, 0162, 0012, 0351, 0275, 0278, 0369, 0365, 0156, 0107, 0347, 0346, 0077, 0283, 0284, 0203, 0204, 0164, 016 0, 0159, 0161, 0078, 0023, 0021, 0115, 0316, 0180, 0335, 00 84, 0165, 0211, 0024, 0360, 0122, 0442
KANGOO	A. B. S.	•	•	•	•	•	•	0	0438, 0325, 0437
KANGOO	AIR CONDITIONING	•	•	•	•	•	•	0	0391, 0422, 0384, 0417, 0386, 0419, 0402, 0430, 0397, 0394, 0389, 0403, 0038, 0168, 0321, 0111, 0065, 0063, 0438
KANGOO	AIRBAG / PRETENSIONERS	•	•	•	•	*	•	*	0438, 0205, 0352, 0413, 0061, 0426, 0424, 0396, 0320, 0208, 0354, 0437, 0064, 0175, 0319, 0288, 0442



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. 

A This function is the new feature in this version.

KANGOO	AUTOMATIC GEARBOX	•	•	•	•	•	•	*	, 0437, 0440, 0217, 0379, 0412, 0487, 0488, 0445, 0451, 047 3, 0017, 0480, 0344, 0215, 0055, 0014, 0470, 0453, 0442, 02 76, 0438
KANG00	CONNECTION UNIT	•	•	•	•	•	0	0	0392, 0401, 0544, , 0435, 0408, 0554, 0504
KANGOO	GAS INJ.	•	•	•	•	•	•	*	0442
KANGOO	HEATER	•	•	•	•	•	•	0	
KANGOO	IMMOBILISER	•	•	•	•	•	•	0	0082, 0059, 0279, 0280
KANGOO	INJECTION	•	•	•	•	•	*	•	0381, 0414, 0173, 0172, 0179, 0079, 0277, 0212, 0393, 0218, 0442, 0366, 0398, 0427, 0412, 0270, 0333, 0379, 0340, 001 3, 0267, 0268, 0112, 0119, 0493, 0498, 0156, 0070, 0272, 01 81, 0182, 0183, 0184, 0185, 0114, 0454, 0412, 0379, 0428, 0 399, 0434, 0407, 0382, 0415
KANGOO	INVERTER	•	•	•	•	•	0	0	
KANGOO	SUPERVISOR	•	•	•	•	•	•	0	0586, 0596, 0500, 0437, 0042, 0556
KANGOO II	A. B. S.	•	•	•	•	*	•	0	0056, 0039, 0367, 0325, 0442, 0438, 0273, 0022, 0125
KANGOO II	ADAPTATION UNIT	•	•	•	•	0	•	0	
KANGOO II	AIR CONDITIONING	•	•	•	•	•	•	•	, 0107, 0041, 0157, 0442
KANGOO II	AIRBAG / PRETENSIONERS	•	•	•	•	•	•	•	0288, 0096, 0257, 0102, 0138, 0141, 0139, 0142, 0202, 0308, 0200, 0307, 0291, 0292, 0249, 0318, 0205, 0352, 0442
KANGOO II	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	0445, 0215, 0440, 0442, 0438
KANGOO II	COMMUNICATIONS UNIT	•	•	•	•	•	•	*	0567, 0517, 0088, 0535
KANGOO II	INJECTION	•	•	•	•	•	•	•	0274, 0324, 0353, 0206, 0441, 0112, 0271, 0277, 0123, 0060, 0187, 0246, 0220, 0455, 0073, 0074, 0075, 0076, 0247, 0114, 0007, 0008, 0465, 0462, 0117, 0496, 0497, 0492, 0494, 0491
KANGOO II	INSTRUMENT PANEL	•	•	•	•	•	•	•	0194, 0152, 0005, 0301, 0344, 0088, 0130, 0069, 0238, 0204, 0004, 0091, 0058, 0313, 0265, 0156, 0442, 0438, 0357, 022 1, 0223, 0222, 0224, 0046, 0047, 0300, 0086, 0195, , 0531, 0 312, 0337
KANGOO II	MULTIMED. CONNECTION	•	•	•	•	0	•	0	0567
KANGOO II	MULTIMEDIA INTERFACE	•	•	•	•	•	•	•	0484, 0552, 0541
KANGOO II	PARKING ASSISTANCE	•	•	•	•	0	•	•	0485, 0044, 0342, 0442
KANGOO II	RADIO	•	•	•	•	•	•	•	0510, 0088,
KANGOO II	UCH	•	•	•	•	•	•	•	0334,
KANGOO II	UPC	•	•	•	•	•	•	•	



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

KANGOO II	VARIABLE P.A.S.	•	•	•	0	•	•	0542, 0330
KANGOO MUX	A. B. S.	•	•	•	•	*	*	0325, 0438, 0437, 0039, 0367,
KANGOO MUX	AIRBAG / PRETENSIONERS	•	•	•	*	•	•	0061, 0320, 0208, 0354, 0437, 0064, 0175, 0319, 0288, 0438 , 0205, 0352, 0442
KANGOO MUX	AUTOMATIC GEARBOX	•	•	•	•	•	*	0445, 0451, 0473, 0017, 0480, 0344, 0440, 0437, 0215, 0055, 0442, 0458, 0438, 0014, 0470, 0453, 0276
KANGOO MUX	CONNECTION UNIT	•		•	•	•	•	0077, 0316, 0341, 0028, 0538
KANGOO MUX	GAS INJ.	•	•	•	•	•	*	0442
KANGOO MUX	IMMOBILISER			•	•	•	*	0549, 0539, 0028, 0538
KANGOO MUX	INJECTION	•	•	•	•	•	*	0277, 0179, 0079, 0442, 0112, 0119, 0366, 0493, 0498, 0156, 0013, 0268, 0340, 0070, 0272, 0181, 0182, 0183, 0184, 0185, 0114, 0454, 0412, 0379, 0428, 0399, 0434, 0407, 0382, 0415
KANGOO Z. E.	A. B. S.			0	0	0	0	
KANGOO Z. E.	ADAPTATION UNIT	•	•	•	0	0	0	
KANGOO Z. E.	AIR CONDITIONING	•		0	0	0	0	
KANGOO Z. E.	AIRBAG / PRETENSIONERS	•	•	0	0	0	0	
KANGOO Z. E.	BCB			0	0	0	0	
KANGOO Z. E.	COMMUNICATIONS UNIT	•	•	•	•	0	*	
KANGOO Z. E.	EVC	•		•	•	0	•	
KANGOO Z. E.	HEATER	•	•	0	0	0	0	
KANGOO Z. E.	INSTRUMENT PANEL	•		0	0	0	0	
KANGOO Z. E.	LBC	•	•	•	0	0	0	
KANGOO Z. E.	LBC2	•		0	0	0	0	
KANGOO Z. E.	MULTIMED. CONNECTION	•	•	•	0	0	0	
KANGOO Z. E.	MULTIMEDIA INTERFACE	•	•	0	0	0	0	
KANGOO Z. E.	PARKING ASSISTANCE	•	•	•	0	0	*	
KANGOO Z. E.	PEB			0	0	0	0	
KANGOO Z.E.	RADIO	• %	<b>*</b>	•	•	0	•	0524, , 0529, 0567
KANGOO Z.E.	TELEMATIC CTRL UNIT			•	•	0	•	
KANGOO Z.E.	UCH	•	•	*	*	0	*	
KANGOO Z.E.	UPC	• %	<b>*</b>	•	*	0	*	0564
KANGOO Z. E.	VARIABLE P.A.S.	•	•	•	0	0	•	



#### NOTES:

This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

KOLEOS/QM5	4 WHEELS DRIVE	• •	•	•	0	•	0	
KOLEOS/QM5	A. B. S.	• •	•	•	•	•	0	0327
KOLEOS/QM5	AIRBAG / PRETENSIONERS	• •	•	0	0	0	0	
KOLEOS/QM5	AMPLIFIER	• •	•	•	•	•	•	0515
KOLEOS/QM5	AUTO FRONT LIGHTING	• •	•	•	•	•	0	0327
KOLEOS/QM5	AUTOMATIC GEARBOX	• •	•	•	0	•	0	0299
KOLEOS/QM5	COMMUNICATIONS UNIT	• •	•	•	•	•	*	0369, 0567, 0088, 0537, 0536
KOLEOS/QM5	DISCHARGE LAMP	• •	•	•	0	•	0	
KOLEOS/QM5	INJECTION	• •	•	•	•	•	*	0006, 0171, 0170, 0179, 0176, 0442, 0274, 0110, 0455, 0045, 0441, 0151, 0332, 0187, 0220
KOLEOS/QM5	INSTRUMENT PANEL	• •	•	•	0	•	•	0195, 0322, 0085, 0088, 0066, 0005, 0576, 0344, 0347, , 053 1, 0532, 0265, 0194, 0312, 0548, 0520
KOLEOS/QM5	MULTIMED. CONNECTION	• •	•	•	0	•	0	0567
KOLEOS/QM5	MULTIMEDIA INTERFACE	• •	•	•	•	•	•	0338, 0570, 0484, , 0552
KOLEOS/QM5	PARKING BRAKE	• •	•	•	•	•	•	0482, 0309, 0484, 0442, , 0446, 0479, 0478
KOLEOS/QM5	PARKING PROX CAN	• •	•	•	0	•	•	0044, 0342, 0459, 0460, 0156, 0481, 0438, 0442
KOLEOS/QM5	RADIO	• •	*	•	*	•	*	0519, 0567, 0529, 0107, 0511, 0088
KOLEOS/QM5	TYRES	• •	•	•	•	•	0	0278
KOLEOS/QM5	UCH	• •	•	•	•	•	•	0509, 0283, 0078, 0019, 0285, 0232, 0077, 0165, 0312, 0522 , 0026, 0160, 0164
KOLEOS/QM5	UPC	• •	•	•	•	•	0	
KOLEOS/QM5	VARIABLE P.A.S.	• •	•	•	0	•	0	
LAGUNA	A. B. S.	• •	•	•	•	*	0	0438, 0056, , 0325, 0286
LAGUNA	AIR CONDITIONING	• •	•	•	0	•	0	
LAGUNA	AIRBAG / PRETENSIONERS	• •	•	•	*	•	0	0438, 0205, 0352, 0413, 0061, 0426, 0424, 0396
LAGUNA	AUTOMATIC GEARBOX	• •	•	•	•	•	0	, 0015
LAGUNA	IMMOBILISER	• •	•	•	•	•	0	0082, 0080, 0279, 0280, 0392, 0401, 0435, 0408
LAGUNA	INJECTION	• •	•	•	•	•	*	0381, 0414, 0173, 0172, 0340, 0013, 0267, 0179, 0079, 0379 , 0412
LAGUNA	INSTRUMENT PANEL	• •	•	•	0	•	•	0216, 0194, 0086, 0118
LAGUNA	VARIABLE P.A.S.	• •	•	•	•	•	0	0438, 0601
LAGUNA	VOICE SYNTHESISER	• •	•		0	•	•	0216



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. 

A This function is the new feature in this version.

I ACUNIA TT	4 B C							0050 0005 0000 0150 0005 0440 0400 0400
LAGUNA II	A. B. S.	• •		•		•	•	0056, 0367, 0003, 0156, 0325, 0442, 0438, 0499, 0495, 0329
LAGUNA II	AIR CONDITIONING	• •	•	•	•	•	•	0346, 0129, 0166, 0062, 0090, 0442, 0369
LAGUNA II	AIRBAG / PRETENSIONERS	• •	•	•	0	•	•	0288, 0064, 0175, 0318, 0205, 0352, 0438, 0442, 0319
LAGUNA II	AUTOMATIC GEARBOX	• •	•	•	•	•	*	0458, 0445, 0442, 0443, 0451, 0473, 0017, 0480, 0344, 0215, 0055, 0438, 0440
LAGUNA II	DISCHARGE LAMP	• •	•	•	•	•	•	0369, 0514
LAGUNA II	GAS INJ.	• •	•	•	•	•	•	
LAGUNA II	HEATER	• •	•	•	•	•	0	
LAGUNA II	INJECTION	• •	•	•	•	•	*	0277, 0179, 0079, 0442, 0340, 0013, 0441, 0455, 0310, 0439, 0112, 0117, 0274, 0045, 0151, 0332
LAGUNA II	INSTRUMENT PANEL	•	•	•	*	•	•	0195, 0369, 0350, 0156, 0152, 0005, 0344, 0348, 0088, 0238, 0312, 0204, 0025, 0349, 0069, 0068, 0370, 0245, 0337, 029, 0155, 0357, 0221, 0222, 0223, 0224, 0147, 0442, 0087, 0240, 0241, 0358, 0359, 0235, 0236, 0085
LAGUNA II	PARKING ASSISTANCE	• •	•	•	0	•	•	0485, 0044, 0342, 0442
LAGUNA II	UCH	•	•	•	•	•	•	0135, 0512, 0351, 0049, 0508, 0275, 0278, 0156, 0050, 0051, 0238, 0077, 0370, 0282, 0164, 0346, 0269, 0160, 0159, 0021, 0078, 0115, 0023, 0027, 0186, 0314, 0341, 0107, 0029, 0355, 0089, 0211, 0347, 0204, 0360, 0053, 0442, 0122
LAGUNA III	4 WHEELS STEERING	• •	•	•	0	0	0	
LAGUNA III	A. B. S.	• •	•	•	•	0	•	0056, 0325, 0442, 0438, 0328, 0345, 0043
LAGUNA III	AIR CONDITIONING	• •	•	•	•	0	•	0157, 0442
LAGUNA III	AIRBAG / PRETENSIONERS	• •	•	•	0	0	•	0288, 0318, 0249, 0442, 0352, 0205
LAGUNA III	AMPLIFIER	• •	•	•	•	0	•	
LAGUNA III	AUTOMATIC GEARBOX	• •	•	•	•	0	•	0456, 0442
LAGUNA III	COMMUNICATIONS UNIT	• •	•	•	•	0	*	
LAGUNA III	DRIVER'S DOOR	• •	•	•	•	0	0	
LAGUNA III	INJECTION	• •	•	•	*	0	*	0187, 0441, 0151, 0332, 0455, 0220, 0462
LAGUNA III	INSTRUMENT PANEL	• •	•	•	•	0	•	0085, 0195, 0005, 0088, 0066, 0349, 0347, , 0069
LAGUNA III	LEFT-HAND DOOR	• 0	0	•	0	0	0	
LAGUNA III	LIGHTING	• •	•	•	•	0	•	
LAGUNA III	MULTIMED. CONNECTION	• •	•	•	0	0	0	



#### NOTES:

This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

LAGUNA III	MULTIMEDIA INTERFACE	•	•	•	•	•	0	*	0338, 0570
LAGUNA III	PARKING BRAKE	•	•	•	•	•	0	•	0309, 0474, 0463, 0442, 0444
LAGUNA III	PARKING PROX CAN	•	•	•	•	0	0	•	0044, 0342, 0459, 0460, 0442, 0447
LAGUNA III	PASSENGER'S DOOR	•	•	•	•	•	0	0	
LAGUNA III	RADIO	•	•	*	*	*	0	*	0510
LAGUNA III	RIGHT-HAND DOOR	•	0	0	•	0	0	0	
LAGUNA III	SEAT MANAGEMENT	•	•	•	•	0	0	0	
LAGUNA III	UCH	•	•	•	•	•	0	•	0278, 0509, 0360
LAGUNA III	UPC	•	•	•	•	•	0	*	0564
LAGUNA III	VARIABLE P.A.S.	•	•	•	•	0	0	0	
LAGUNA PHASE 2	A. B. S.	•	•	•	•	•	*	0	0438, 0056, , 0325, 0286
LAGUNA PHASE 2	AIR CONDITIONING	•	•	•	•	0	•	0	
LAGUNA PHASE 2	AIRBAG / PRETENSIONERS	•	•	•	•	*	•	*	0205, 0352, 0413, 0438, 0061, 0426, 0424, 0396, 0320, 0208 , 0354, 0437
LAGUNA PHASE 2	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	, 0015, 0437, 0440, 0217, 0379, 0412, 0487, 0488
LAGUNA PHASE 2	GAS INJ.	•	•	•	•	•	•	•	
LAGUNA PHASE 2	IMMOBILISER	•	•	•	•	•	•	0	0082, 0080, 0279, 0280, 0392, 0401, 0435, 0408
LAGUNA PHASE 2	INJECTION	•	•	•	•	•	•	*	0381, 0414, 0277, 0340, 0013, 0267, 0179, 0079, 0379, 0412 , 0407, 0434, 0379, 0412
LAGUNA PHASE 2	INSTRUMENT PANEL	•	•	•	•	0	•	•	0216, 0194, 0086, 0118
LAGUNA PHASE 2	SEAT MANAGEMENT	•	•	•	•	•	•	0	0437
LAGUNA PHASE 2	VARIABLE P.A.S.	•	•	•	•	•	•	0	0438, 0601
LAGUNA PHASE 2	VOICE SYNTHESISER	•	•	•	•	0	•	•	0216
LAGUNAII PH2	A. B. S.	•	•	•	•	•	•	•	0056, 0156, 0442, 0325, 0367, 0438, 0328, 0345, 0043, 0273, 0022, 0054, 0169
LAGUNAII PH2	AIR CONDITIONING	•	•	•	•	•	•	•	0369, 0062, 0090, 0346, 0129, 0166, 0442
LAGUNAII PH2	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0288, 0064, 0175, 0318, 0205, 0352, 0438, 0442
LAGUNAII PH2	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	0445, 0443, 0442, 0215, 0440
LAGUNAII PH2	COMMUNICATIONS UNIT	•	•	•	•	•	•	•	0369
LAGUNAII PH2	HANDS-FREE KIT	•	•	•	•	•	•	•	
LAGUNAII PH2	HEATER	•	•	•	•	•	•	0	



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

101 570010	i identification product refer to the speci-								
LAGUNAII PH2	INJECTION	•	•	•	•	•	•	*	0274, 0441, 0442, 0353, 0206, 0112, 0117, 0310, 0439, 0455, 0340, 0013, 0079, 0179, 0045, 0277, 0151, 0332, 0110, 018, 0331
LAGUNAII PH2	INSTRUMENT PANEL	•	•	•	•	•	•	•	0195, 0369, 0350, 0156, 0152, 0005, 0344, 0348, 0088, 0238, 0312, 0204, 0025, 0349, 0069, 0068, 0370, 0245, 0337, 029, 0155, 0357, 0221, 0222, 0223, 0224, 0147, 0442
LAGUNAII PH2	LIGHTING	•	•	•	•	•	•	•	0369, , 0505, 0521, 0563
LAGUNAII PH2	PARKING ASSISTANCE	•	•	•	•	0	•	•	0485, 0044, 0342, 0442, 0447
LAGUNAII PH2	PARKING BRAKE	•	•	•	•	•	•	•	0483, 0309, 0436, 0484, 0442
LAGUNAII PH2	RADIO								
LAGUNAII PH2	UCH	•	•	•	•	•	•	•	0135, 0512, 0162, 0351, 0012, 0275, 0278, 0369, 0365, 0156, 0107, 0347, 0346, 0077, 0283, 0203, 0204, 0164, 0314, 016 0, 0159, 0161, 0078, 0023, 0021, 0115, 0316, 0180, 0335, 00 84, 0165, 0211, 0442, 0360, 0122, 0049, 0508, 0050, 0051, 0 238, 0370, 0282, 0269, 0027, 0186, 0341, 0029, 0355, 0089, 0053, 0284
LATITUDE/SM5	A. B. S.	•	•	•	0	0	0	0	
LATITUDE/SM5	AIR CONDITIONING								
LATITUDE/SM5	AIRBAG / PRETENSIONERS	•	•	•	0	0	0	0	
LATITUDE/SM5	AMPLIFIER	•	•	•	•	0	0	•	
LATITUDE/SM5	AUTOMATIC GEARBOX								
LATITUDE/SM5	COMMUNICATIONS UNIT	•	•	•	•	•	0	*	
LATITUDE/SM5	DRIVER'S DOOR	•	•	•	0	0	0	0	
LATITUDE/SM5	INJECTION	•	•	•	*	*	0	*	0187, 0220, 0441, 0462
LATITUDE/SM5	INSTRUMENT PANEL	•	•	•	•	0	0	•	
LATITUDE/SM5	LEFT-HAND DOOR	•	0	0	0	0	0	0	
LATITUDE/SM5	LIGHTING	•	•	•	•	0	0	•	
LATITUDE/SM5	MULTIMED. CONNECTION	•	•	•	0	0	0	0	
LATITUDE/SM5	MULTIMEDIA INTERFACE	•	•	•	•	0	0	•	
LATITUDE/SM5	PARKING BRAKE								
LATITUDE/SM5	PARKING PROX CAN	•	•	•	•	0	0	•	0044, 0342, 0459, 0460, 0442, 0447
LATITUDE/SM5	PASSENGER'S DOOR	•	•	•	0	0	0	0	
LATITUDE/SM5	RADIO	•	•	•	•	0	0	•	
LATITUDE/SM5	RIGHT-HAND DOOR	•	0	0	0	0	0	0	



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

	T				<u> </u>			T _	_
LATITUDE/SM5	SEAT MANAGEMENT	•	•	•	0	0	0	0	
LATITUDE/SM5	UCH	•	•	•	•	0	0	•	
LATITUDE/SM5	UPC	•	•	•	•	•	0	0	0564
LATITUDE/SM5	VARIABLE P.A.S.								
LOGAN	A. B. S.	•	•	•	•	•	•	0	0056, 0039, 0367, 0325, 0442, 0438
LOGAN	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0288, 0096, 0257, 0145, 0146, 0097, 0258, 0099, 0260, 0249, 0318, 0177, 0311, 0312, 0248, 0102, 0140, 0143, 0442, 020 5, 0352, 0064
LOGAN	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	0445, 0215, 0440, 0442, 0438
LOGAN	GAS INJ.	•	•	•	•	•	•	•	0442
LOGAN	INJECTION	•	•	•	•	•	•	*	0112, 0271, 0455, 0441, 0206, 0073, 0074, 0075, 0076, 0277, 0442, 0187, 0247, 0114, 0220, 0007, 0008, 0465, 0060
LOGAN	RADIO	•	•	•	•	•	•	•	
LOGAN	TRACKER	•	•	•	•	0	•	•	0571, 0019,
LOGAN	UCH	•	•	•	•	•	•	*	0133, 0562
LOGAN	VARIABLE P.A.S.	•	•	•	•	0	•	•	
MAST. PRO. PH2	A. B. S.	•	•	•	•	•	•	0	0325
MAST. PRO. PH2	ADAPTATION UNIT	•	•	•	•	0	0	0	
MAST. PRO. PH2	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0064, 0175, 0288, 0438, 0205, 0352, 0442
MAST. PRO. PH2	CONNECTION UNIT	•	•	•	•	•	•	•	0085, 0028, 0557
MAST. PRO. PH2	DRIVING SCHOOL UNIT	•	•	•	•	0	0	0	
MAST. PRO. PH2	IMMOBILISER	•	•	•	•	•	•	•	0085, 0028, 0557
MAST. PRO. PH2	INJECTION	•	•	•	•	•	•	•	0119, 0009, 0454, 0151, 0323, 0442, 0179, 0079
MAST. RWD. PH3	A. B. S.	•	•	•	•	•	•	•	0056, 0040, 0442, 0367, 0325, 0438
MAST. RWD. PH3	ADAPTATION UNIT	•	•	•	•	0	•	0	
MAST. RWD. PH3	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0288, 0064, 0175, 0438, 0205, 0352, 0442
MAST. RWD. PH3	COMMUNICATIONS UNIT	•	•	•	•	•	•	•	
MAST. RWD. PH3	INJECTION	•	•	•	•	•	•	•	0274, 0455, 0441, 0151, 0332
MAST. RWD. PH3	UCH	•	•	•	•	•	•	•	0539, 0549, 0077
MASTER	A. B. S.	•	•	•	•	•	0	0	
MASTER	AIRBAG / PRETENSIONERS	•	•	•	•	*	•	*	0438, 0205, 0352, 0413, 0061, 0320, 0208, 0354, 0437
MASTER	CONNECTION UNIT	•	•	•	•	•	0	0	0392, 0401, 0544, , 0435, 0408, 0554, 0504



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

MASTER	IMMOBILISER	• •	•	•	•	•	0	0082, 0059, 0279, 0280
MASTER	INJECTION	•	•	•	•	*	*	0340, 0013, 0267, 0179, 0079, 0411, 0378, 0410, 0380, 0407, 0385, 0418, 0379, 0412, 0406, 0433, 0434, 0119, 0114, 0454, 0428, 0399, 0382, 0415, 0442, 0250, 0362, 0361, 0486
MASTER	PILOTED SUSPENSION	• •	•	•	0	•	0	0437
MASTER III	A. B. S.	• •	•	•	•	0	0	0039, 0056, 0325, 0442, 0438
MASTER III	ADAPTATION UNIT	• •	•	•	0	0	0	
MASTER III	AIR CONDITIONING	•	•	•	•	0	*	0442, 0450
MASTER III	AIRBAG / PRETENSIONERS	•	•	•	0	0	•	0288, 0064, 0318, 0249, 0442, 0352, 0205
MASTER III	AUTOMATIC GEARBOX	• •	•	0	0	0	0	
MASTER III	COMMUNICATIONS UNIT	• •	•	•	•	0	*	
MASTER III	INJECTION	• •	•	•	•	0	*	0114, 0187, 0220, 0455, 0457, 0441, 0464, 0452
MASTER III	INSTRUMENT PANEL	• •	•	•	•	0	0	0265, 0195, 0005, 0088, , 0313, 0152, 0221, 0223, 0222, 022 4
MASTER III	LIGHTING	• •	•	•	0	0	0	
MASTER III	MULTIMED. CONNECTION	•	•	•	0	0	0	
MASTER III	MULTIMEDIA INTERFACE	• •	•	•	•	0	0	
MASTER III	PARKING ASSISTANCE	• •	•	•	0	0	*	
MASTER III	RADIO	• *	*	•	•	0	•	0524, , 0529, 0567, 0519,
MASTER III	SMART KEYLESS	• •	•	0	0	0	0	
MASTER III	TELEMATIC CTRL UNIT	• •	•	•	•	0	•	
MASTER III	UCH	• •	•	•	•	0	•	0572
MASTER III	UPC	• •	•	•	•	0	*	0137, 0564
MASTER PH 2	A. B. S.	• •	•	•	•	•	0	, 0325
MASTER PH 2	ADAPTATION UNIT	• •	•	•	0	0	0	
MASTER PH 2	AIRBAG / PRETENSIONERS	• •	•	•	0	•	•	0064, 0175, 0288, 0438, 0205, 0352, 0442
MASTER PH 2	AUTOMATIC GEARBOX	• •	•	•	•	•	0	0458, 0476, 0274, 0448, 0477, 0475, 0438, 0442, 0490
MASTER PH 2	CONNECTION UNIT	• •	•	•	•	•	•	0028,
MASTER PH 2	DRIVING SCHOOL UNIT	• •	•	•	0	0	0	
MASTER PH 2	IMMOBILISER	• •	•	•	•	•	•	0028,
MASTER PH 2	INJECTION	•	•	•	•	•	•	0119, 0009, 0454, 0250, 0151, 0442, 0114, 0179, 0079, 0013, 0362, 0361, 0486



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

MASTER PH 2	PARKING ASSISTANCE	•	•	•	•	0	0	•	0485, 0044, 0342, 0442
MASTER PH 2	PILOTED SUSPENSION	•	•	•	•	0	•	0	0437
MASTER PH 3	A. B. S.	•	•	•	•	•	•	*	0438, 0325, 0040, 0329, 0367
MASTER PH 3	ADAPTATION UNIT	•	•	•	•	0	•	0	
MASTER PH 3	AIRBAG / PRETENSIONERS	•	•	•		0	•	•	0288, 0064, 0175, 0438, 0205, 0352, 0442
MASTER PH 3	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	0448, 0476, 0274, 0477, 0475, 0438, 0490, 0489, 0442
MASTER PH 3	COMMUNICATIONS UNIT	•	•	•	•	•	•	•	
MASTER PH 3	INJECTION	•	•	•	•	•	•	•	0274, 0110, 0455, 0151, 0332, 0441, 0045, 0060, 0187, 0220, 0117, 0113, 0310, 0439, 0013, 0340, 0042, 0179, 0079, 0362, 0361, 0281
MASTER PH 3	PARKING ASSISTANCE	•	•	•	•	0	•	•	0044, 0485, 0342, 0442
MASTER PH 3	PILOTED SUSPENSION	•	•	•	•	•	•	0	
MASTER PH 3	TRACKER	•	•	•	•	0	•	•	0571, 0019,
MASTER PH 3	UCH	•	•	•	•	•	•	•	0539, 0549, 0077
MASTER RWD	AIRBAG / PRETENSIONERS	•	•	•	•	•	•	•	0061, 0208, 0354, 0437
MASTER RWD	CONNECTION UNIT	•	•	•	•	•	0	0	0392, 0401, 0544, , 0435, 0408, 0554, 0504
MASTER RWD	IMMOBILISER	•	•	•	•	•	•	0	0082, 0059, 0279, 0280
MASTER RWD	INJECTION	•	•	•	•	0	•	0	
MEGANE II	A. B. S.	•	•	•	•	•	•	0	0056, 0039, 0325, 0442, 0438, 0367, 0273, 0022, 0125, 0126, 0363
MEGANE II	AIR CONDITIONING	•	•	•	•	0	•	•	0369, 0167, 0442
MEGANE II	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0288, 0035, 0036, 0037, 0153, 0154, 0100, 0261, 0251, 0252, 0092, 0093, 0071, 0072, 0145, 0146, 0295, 0296, 0136, 0290, 0103, 0101, 0262, 0102, 0249, 0205, 0352, 0438, 0442, 0188, 0189, 0109, 0108, 0192, 0190, 0191, 0095, 0255, 0263, 0106, 0256, 0254, 0318, 0064, 0369
MEGANE II	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	0451, 0445, 0442, 0438, 0215, 0440
MEGANE II	COMMUNICATIONS UNIT	•	•	•	•	•	•	•	
MEGANE II	DISCHARGE LAMP	•	•	•	•	0	•	•	0513
MEGANE II	GAS INJ.	•	•	•	•	•	•	•	0442
MEGANE II	INJECTION	•	•	•	•	•	•	*	0274, 0112, 0455, 0441, 0206, 0353, 0271, 0310, 0439, 0073, 0074, 0075, 0076, 0110, 0277, 0079, 0179, 0151, 0123, 018 7, 0045, 0246, 0332, 0340, 0331, 0060



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. 

A This function is the new feature in this version.

									0194, 0369, 0156, 0152, 0066, 0344, 0348, 0088, 0069, 0238
MEGANE II	INSTRUMENT PANEL	•	•	•	•	•	•	•	, 0298, 0442, 0221, 0222, 0041, 0368, 0337, 0204, 0052, 030 2, 0058, 0312, 0245, 0357, 0223, 0224, 0147, 0265
MEGANE II	LEFT COSLAD	•	•	•	•	•	•	•	0513, 0369, 0514
MEGANE II	LIGHTING	•	•	•	•	•	•	•	0369, , 0505, 0563
MEGANE II	PARKING ASSISTANCE	•	•	•	•	0	•	•	0485, 0044, 0342, 0442, 0447
MEGANE II	RIGHT COSLAD	•	•	•	•	•	•	•	0513, 0369, 0514
MEGANE II	SUNROOF CONTROL UNIT	•	•	•	•	•	•	•	0560
MEGANE II	TRACKER	•	•	•	•	0	•	•	0571, 0019,
MEGANE II	UCH	•	•	•	•	•	•	•	0509, 0278, 0028, 0314, 0137, 0164, 0057, 0078, 0156, 0107, 0120, 0293, 0131, 0356, 0289
MEGANE II	UPC	•	•	•	•	•	•	•	0020
MEGANE II	VARIABLE P.A.S.	•	•	•	•	0	•	•	0330, , 0551
MEGANE/SCEN.	A. B. S.	•	•	•	•	•	•	0	0438, 0325, 0437, 0367, 0329, 0286, 0287
MEGANE/SCEN.	AIR CONDITIONING	•	•	•	•	•	•	*	0391, 0422, 0384, 0417, 0386, 0419, 0402, 0430, 0397, 0394, 0389, 0403, 0038, 0168, 0321, 0111, 0065, 0063, 0438, 030 3, 0201
MEGANE/SCEN.	AIRBAG / PRETENSIONERS	•	•	•	•	*	•	*	0438, 0205, 0352, 0413, 0061, 0426, 0424, 0396, 0320, 0208 , 0354, 0437, 0064, 0175, 0319, 0288
MEGANE/SCEN.	AUTOMATIC GEARBOX	•	•	•	•	•	•	*	, 0015, 0437, 0440, 0217, 0379, 0412, 0487, 0488, 0445, 045 1, 0473, 0017, 0480, 0344, 0215, 0055, 0014, 0470, 0453, 04 42, 0276, 0438
MEGANE/SCEN.	GAS INJ.	•	•	•	•	•	•	0	0442
MEGANE/SCEN.	INJECTION	•	•	•	•	•	*	*	0381, 0414, 0277, 0412, 0375, 0376, 0398, 0427, 0407, 0434, 0385, 0418, 0179, 0079, 0124, , 0442, 0366, 0270, 0333, 03 79, 0156, 0340, 0013, 0267, 0379, 0412, 0268, 0119, 0114, 0 454, 0428, 0399, 0382, 0415
MEGANE/SCEN.	SEAT MANAGEMENT	•	•	•		•	•	0	0437
MEGANE/SCEN.	SUNROOF CONTROL UNIT	•	•	•	•	•	•	0	
MEGANE/SCEN.	TYRES	•	•	•	•	•	0	•	0135, 0275, 0369, 0122, 0360, 0053
MEGANEIII/SCEN CIII	I A. B. S.	•	•	•	•	•	0	•	0056, 0325, 0442, 0438, 0328, 0345, 0043, 0210
MEGANEIII/SCEN CIII	I AIR CONDITIONING	•	•	•	•	•	0	*	0442



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

▲ This function is the new feature in this version.

Tunction prease refer to the speci	ai iunction	ii tabie.						
AIRBAG / PRETENSIONERS	•	•	•	•	0	0	•	0288, 0318, 0442, 0352, 0205
AUTOMATIC GEARBOX	•	•	•	0	0	0	0	
COMMUNICATIONS UNIT	•	•	•	•	•	0	*	
DRIVER'S DOOR	•	•	•	•	•	0	0	
FRONT CAMERA	•	•	•	•	0	0	0	0514
INJECTION	•	•	•	•	*	0	•	0187, 0220, 0455, 0441, 0462, 0466, 0467, 0468, 0469, 0465, 0464
INSTRUMENT PANEL	•	•	•	•	•	0	•	0085, , 0156, 0069, , 0195, 0005, 0088, 0066, 0349, 0347, 02 23, 0219, 0578
LIGHTING	•	•	•	•	0	0	•	
MULTIMED. CONNECTION	•	•	•	•	0	0	0	
MULTIMEDIA INTERFACE	•	•	•	•	•	0	0	
PARKING BRAKE	•	•	•	•	0	0	•	
PARKING PROX CAN	•	•	•	•	0	0	•	0044, 0342, 0459, 0460, 0442, 0447
PASSENGER'S DOOR	•	•	•	•	0	0	0	
RADIO	•	*	*	•	•	0	*	0524, , 0529, 0567,
SEAT MANAGEMENT	•	•	•	0	0	0	0	
SUNROOF CONTROL UNIT	•	•	•	*	0	0	0	
TELEMATIC CTRL UNIT	•	•	•	•	•	0	•	
	•	•	•	•	•	0	•	0278, 0509
UPC	•	•	•	•	•	0	0	0564
	AIRBAG / PRETENSIONERS  AUTOMATIC GEARBOX  COMMUNICATIONS UNIT  DRIVER'S DOOR  FRONT CAMERA  INJECTION  INSTRUMENT PANEL  LIGHTING  MULTIMED. CONNECTION  MULTIMEDIA INTERFACE  PARKING BRAKE  PARKING PROX CAN  PASSENGER'S DOOR  RADIO  SEAT MANAGEMENT  SUNROOF CONTROL UNIT	AIRBAG / PRETENSIONERS  AUTOMATIC GEARBOX  COMMUNICATIONS UNIT  DRIVER'S DOOR  FRONT CAMERA  INJECTION  INSTRUMENT PANEL  LIGHTING  MULTIMED. CONNECTION  MULTIMEDIA INTERFACE  PARKING BRAKE  PARKING PROX CAN  PASSENGER'S DOOR  RADIO  SEAT MANAGEMENT  SUNROOF CONTROL UNIT  TELEMATIC CTRL UNIT  UCH	AUTOMATIC GEARBOX  COMMUNICATIONS UNIT  DRIVER'S DOOR  FRONT CAMERA  INJECTION  INSTRUMENT PANEL  LIGHTING  MULTIMED. CONNECTION  MULTIMEDIA INTERFACE  PARKING BRAKE  PARKING PROX CAN  PASSENGER'S DOOR  RADIO  SEAT MANAGEMENT  SUNROOF CONTROL UNIT  TELEMATIC CTRL UNIT  O  O  O  O  O  O  O  O  O  O  O  O  O	AIRBAG / PRETENSIONERS  AUTOMATIC GEARBOX  COMMUNICATIONS UNIT  DRIVER'S DOOR  FRONT CAMERA  INJECTION  INSTRUMENT PANEL  LIGHTING  MULTIMED. CONNECTION  MULTIMEDIA INTERFACE  PARKING BRAKE  PARKING PROX CAN  PASSENGER'S DOOR  RADIO  SEAT MANAGEMENT  SUNROOF CONTROL UNIT  TELEMATIC CTRL UNIT  UCH  •  •  •  •  •  •  •  •  •  •  •  •  •	AIRBAG / PRETENSIONERS  AUTOMATIC GEARBOX  COMMUNICATIONS UNIT  DRIVER'S DOOR  FRONT CAMERA  INJECTION  INSTRUMENT PANEL  LIGHTING  MULTIMED. CONNECTION  MULTIMEDIA INTERFACE  PARKING BRAKE  PARKING PROX CAN  PASSENGER'S DOOR  RADIO  SEAT MANAGEMENT  SUNROOF CONTROL UNIT  TELEMATIC CTRL UNIT  O  O  O  O  O  O  O  O  O  O  O  O  O	AUTOMATIC GEARBOX  AUTOMATIC GEARBOX  COMMUNICATIONS UNIT  DRIVER'S DOOR  FRONT CAMERA  INJECTION  INSTRUMENT PANEL  LIGHTING  MULTIMED. CONNECTION  MULTIMEDIA INTERFACE  PARKING BRAKE  PARKING PROX CAN  PASSENGER'S DOOR  RADIO  SEAT MANAGEMENT  SUNROOF CONTROL UNIT  TELEMATIC CTRL UNIT  O  O  O  O  O  O  O  O  O  O  O  O  O	AUTOMATIC GEARBOX  AUTOMATIC GEARBOX  COMMUNICATIONS UNIT  DRIVER'S DOOR  FRONT CAMERA  INJECTION  INSTRUMENT PANEL  LIGHTING  MULTIMED. CONNECTION  MULTIMEDIA INTERFACE  PARKING BRAKE  PARKING PROX CAN  PASSENGER'S DOOR  RADIO  SEAT MANAGEMENT  SUNROOF CONTROL UNIT  TELEMATIC CTRL UNIT  O  O  O  O  O  O  O  O  O  O  O  O  O	AUTOMATIC GEARBOX  AUTOMATIC GEA



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

MEGANEIII/SCENI CIII	VARIABLE P.A.S.	•	• •	•	0	0	0	0330
MODUS	A. B. S.	•	• •	•	•	•	0	0056, 0039, 0325, 0442, 0438, 0126, 0367, 0273, 0022, 0125 , 0363
MODUS	AIR CONDITIONING	•	• •	•	•	•	•	0369, 0167, 0157, 0442
MODUS	AIRBAG / PRETENSIONERS	•	•	•	0	•	•	0288, 0387, 0371, 0432, 0094, 0253, 0251, 0252, 0092, 0093, 0071, 0072, 0145, 0146, 0144, 0290, 0103, 0101, 0262, 010 2, 0263, 0254, 0249, 0205, 0352, 0438, 0442, 0064, 0318
MODUS	AUTOMATIC GEARBOX	•	• •	•	•	•	0	0445, 0215, 0440, 0438, 0442, 0458, 0274, 0448, 0476, 0477 , 0475, 0489, 0490
MODUS	HANDS-FREE KIT	•	• •	•	•	•	•	
MODUS	INJECTION	•	•	•	•	•	•	0274, 0441, 0206, 0353, 0442, 0112, 0271, 0310, 0439, 0455, 0073, 0074, 0075, 0076, 0277, 0123, 0187, 0246, 0060, 024 7, 0114, 0220, 0007, 0008, 0465, 0462, 0117, 0496, 0497, 04 92, 0494, 0491
MODUS	INSTRUMENT PANEL	•	•	•	•	•	•	0369, 0195, 0088, 0005, 0156, 0152, 0344, 0348, 0069, 0238, 0204, 0245, 0442, 0357, 0221, 0223, 0222, 0224, 0150, 014, 0165
MODUS	LIGHTING	•	• •	•	•	•	•	0369, , 0505, 0521, 0563, 0518
MODUS	PARKING ASSISTANCE	•	•	•	0	•	•	0485, 0044, 0342, 0442, 0447
MODUS	TYRES	•	• •	•	0	•	•	0278, 0275, 0369, 0442, 0122, 0315
MODUS	UCH	•	• •	•	•	•	•	, 0372, 0165, 0164, 0107, 0078, 0336, 0001, 0057, 0316, 057
MODUS	UPC	•	• •	•	•	•	•	
MODUS	VARIABLE P.A.S.	•	•	•	0	•	•	0330
NEW SM3/FLUENCE/MEG ANE	A. B. S.	•	•	•	*	0	*	0056, 0325, 0442, 0438, 0328, 0345, 0043, 0210
NEW SM3/FLUENCE/MEG ANE	AIR CONDITIONING	•	•	•	•	0	•	0442, 0450
NEW SM3/FLUENCE/MEG ANE	AIRBAG / PRETENSIONERS	•	•	•	0	0	•	0288, 0318, 0442, 0352, 0205



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lack This function is the new feature in this version.

ls for	special	function	please	refer	to	the	special	function	table.
--------	---------	----------	--------	-------	----	-----	---------	----------	--------

NEW SM3/FLUENCE/MEG ANE	AMPLIFIER	•	•	•	•	•	0	•	
NEW SM3/FLUENCE/MEG ANE	AUTOMATIC GEARBOX	•	•	•	*	*	0	0	0445, 0215, 0440, 0442, 0438
NEW SM3/FLUENCE/MEG ANE	ВСВ	•	•	•	0	0	0	0	
ANE	COMMUNICATIONS UNIT	•	•	•	*	•	0	*	
NEW SM3/FLUENCE/MEG ANE	DRIVER'S DOOR	•	•	•	•	•	0	0	
NEW SM3/FLUENCE/MEG ANE	EVC	•	•	•	•	•	0	•	
NEW SM3/FLUENCE/MEG ANE	INJECTION	•	•	•	•	*	0	•	0187, 0220, 0441, 0462, 0466, 0467, 0468, 0469, 0455, 0465, 0464
ANE	INSTRUMENT PANEL	•	•	•	•	•	0	•	0085, 0195, 0005, 0088, 0066, 0349, 0347, , 0156, 0069, 022 3, 0219, 0344,
NEW SM3/FLUENCE/MEG ANE	LBC	•	•	•	•	0	0	0	
NEW SM3/FLUENCE/MEG ANE	LBC2	•	•	•	0	Ο	0	0	
NEW SM3/FLUENCE/MEG ANE	LIGHTING	•	•	•	•	0	0	•	
NEW SM3/FLUENCE/MEG ANE	MULTIMED. CONNECTION	•	•	•	•	0	0	0	



#### NOTES:

This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

▲ This function is the new feature in this version.

	ranotion prease refer to the speed	14.1100101							
ANE	MULTIMEDIA INTERFACE	•	•	•	•	•	0	0	
NEW SM3/FLUENCE/MEG ANE	PARKING BRAKE	•	•	•	•	0	0	•	
ANE	PARKING PROX CAN	•	•	•	•	0	0	•	0044, 0342, 0459, 0460, 0442, 0447
NEW SM3/FLUENCE/MEG ANE	PEB	•	•	•	0	0	0	0	
NEW SM3/FLUENCE/MEG ANE	RADIO	•	*	*	•	•	0	•	0524, , 0529, 0567, 0519, , 0502, , 0558, 0565, 0506
ANE	SUNROOF CONTROL UNIT	•	•	•	•	•	0	0	
ANE	TELEMATIC CTRL UNIT	•	•	•	•	•	0	•	
NEW SM3/FLUENCE/MEG ANE	TRACKER	•	•	•	•	0	•	•	0571, 0019,
NEW SM3/FLUENCE/MEG ANE	UCH	•	•	•	•	•	0	•	0278, 0509,
NEW SM3/FLUENCE/MEG ANE	UPC	•	•	•	•	•	0	0	0564
NEW SM3/FLUENCE/MEG ANE	VARIABLE P.A.S.	•	•	•	•	0	0	0	0330
SANDERO	A. B. S.	•	•	•	•	•	•	0	0056, 0039, 0367, 0325, 0442, 0438
	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0288, 0096, 0257, 0145, 0146, 0097, 0258, 0099, 0260, 0249, 0318, 0177, 0311, 0312, 0248, 0102, 0140, 0143, 0442, 020 5, 0352, 0064



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

•								
SANDERO	AUTOMATIC GEARBOX	•	•	•	•	•	0	0445, 0215, 0440, 0442, 0438
SANDERO	GAS INJ.	•	• •	•	•	•	•	0442
SANDERO	INJECTION	•	•	•	•	•	*	0112, 0271, 0455, 0441, 0206, 0073, 0074, 0075, 0076, 0277, 0442, 0187, 0247, 0114, 0220, 0007, 0008, 0465, 0060
SANDERO	RADIO	•	• •	•	•	•	•	
SANDERO	TRACKER	•	• •	•	0	•	•	0571, 0019,
SANDERO	UCH	•	• •	•	•	•	*	0133, 0562
SANDERO	VARIABLE P.A.S.	•	• •	•	0	•	•	
SCENIC II	A. B. S.	•	• •	•	•	•	0	0056, 0039, 0325, 0442, 0438, 0367, 0273, 0022, 0125, 0126 , 0363
SCENIC II	AIR CONDITIONING	•	• •	•	0	•	•	0369, 0167, 0442
SCENIC II	AIRBAG / PRETENSIONERS	•	•	•	0	•	•	0288, 0035, 0036, 0037, 0153, 0154, 0188, 0189, 0109, 0108, 0192, 0190, 0191, 0249, 0100, 0261, 0251, 0252, 0092, 0093, 0095, 0255, 0071, 0072, 0145, 0146, 0295, 0296, 0136, 0290, 0103, 0102, 0263, 0106, 0256, 0254, 0318, 0205, 0352, 0438, 0442, 0064, 0369
SCENIC II	AUTOMATIC GEARBOX	•	•	•	•	•	0	0451, 0445, 0442, 0438, 0215, 0440
SCENIC II	COMMUNICATIONS UNIT	•	• •	•	•	•	•	0369
SCENIC II	DISCHARGE LAMP	•	• •	•	•	•	•	0369, 0514
SCENIC II	GAS INJ.	•	• •	•	•	•	•	0442
SCENIC II	INJECTION	•	• •	•	•	•	*	0274, 0112, 0455, 0441, 0206, 0353, 0271, 0310, 0439, 0073, 0074, 0075, 0076, 0110, 0277, 0079, 0179, 0151, 0123, 018, 0045, 0246, 0332, 0340, 0331, 0060
SCENIC II	INSTRUMENT PANEL	•	• •	•	*	•	•	0194, 0025, 0369, 0156, 0152, 0066, 0344, 0348, 0088, 0069 , 0238, 0442, 0221, 0222, 0245, 0357, 0223, 0224, 0265
SCENIC II	MULTIMEDIA INTERFACE	•	• •	•	•	•	•	0369, 0484
SCENIC II	PARKING ASSISTANCE	•	• •	•	0	•	•	0485, 0044, 0342, 0442, 0447
SCENIC II	PARKING BRAKE	•	• •	•	•	•	•	0483, 0309, 0436, 0484, 0442
SCENIC II	PARKING PROX CAN	•	• •	•	0	•	•	0485, 0044, 0342, 0459, 0460, 0442, 0447, 0438
SCENIC II	RADIO	•	• •	•	•	•	•	0510, 0088,
SCENIC II	UCH	•	• •	•	•	•	•	0509, 0278, 0028, 0314, 0137, 0164, 0057, 0078, 0131, 0156 , 0107, 0120, 0293, 0356, 0289
SCENIC II	UPC	•	• •	•	•	•	•	0020
SCENIC II	VARIABLE P.A.S.	•	•		0	•	*	0330, , 0551



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

_									
SM7 - L47	A. B. S.	•	•	•	0	0	0	0	
SM7 - L47	AIR CONDITIONING								
SM7 - L47	AIRBAG / PRETENSIONERS	•	•	•	0	0	0	0	
SM7 - L47	AMPLIFIER	•	•	•	•	0	0	•	
SM7 - L47	AUTOMATIC GEARBOX	•	•	•	0	0	0	0	
SM7 - L47	COMMUNICATIONS UNIT	•	•	•	•	•	0	*	
SM7 - L47	DRIVER'S DOOR	•	•	•	0	0	0	0	
SM7 - L47	INJECTION	•	•	•	0	0	0	0	
SM7 - L47	INSTRUMENT PANEL	•	•	•		0	0	•	
SM7 - L47	LEFT-HAND DOOR	•	0	0	0	0	0	0	
SM7 - L47	LIGHTING	•	•	•		0	0	•	
SM7 - L47	MULTIMED. CONNECTION	•	•	•	0	0	0	0	
SM7 - L47	MULTIMEDIA INTERFACE	•	•	•		0	0	•	
SM7 - L47	PARKING BRAKE								
SM7 - L47	PARKING PROX CAN	•	•	•		0	0	•	0044, 0342, 0459, 0460, 0442, 0447
SM7 - L47	PASSENGER'S DOOR	•	•	•	0	0	0	0	
SM7 - L47	RADIO	•	•	•		0	0	•	
SM7 - L47	RIGHT-HAND DOOR	•	0	0	0	0	0	0	
SM7 - L47	SEAT MANAGEMENT	•	•	•	0	0	0	0	
SM7 - L47	UCH	•	•	•	•	0	0	•	
SM7 - L47	UPC	•	•	•	0	0	0	0	
THALIA/SYMB. 2	A. B. S.	•	•	•		•	•	0	0039, 0056, 0325, 0442, 0438, 0367
THALIA/SYMB. 2	AIR CONDITIONING	•	•	•		•	•	0	
THALIA/SYMB.2	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0288, 0064, 0352, 0205, 0318, 0423, 0311, 0312, 0258, 0260, 0257, 0249, 0248, 0177, 0096, 0097, 0099, 0102, 0145, 014 6, 0442
THALIA/SYMB. 2	AUTOMATIC GEARBOX	•	•	•		•	•	*	0445, 0215, 0440, 0442, 0438, 0276
THALIA/SYMB.2	INJECTION	•	•	•	•	•	•	*	0112, 0271, 0455, 0441, 0206, 0073, 0074, 0075, 0076, 0277, 0442, 0268, 0156, 0013, 0543, 0181, 0187
THALIA/SYMB. 2	TRACKER	•	•	•	•	0	•	•	0571, 0019,
THALIA/SYMB. 2	UCH	•	•	•	•	•	•	*	0133, 0562
THALIA/SYMB. 2	VARIABLE P.A.S.	•	•	•		0	0	0	



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. 

A This function is the new feature in this version.

THALIA/SYMBL	A. B. S.	•	•	• •	•	*	*	0438, 0325, 0039, 0367,
THALIA/SYMBL	AIR CONDITIONING	•	•	• •	•	*	0	0391, 0422, 0384, 0417, 0386, 0419, 0402, 0430, 0397, 0394, 0389, 0403, 0038, 0168, 0321, 0111, 0065, 0063, 0438
THALIA/SYMBL	AIRBAG / PRETENSIONERS	•	•	• •	*	•	•	0208, 0354, 0064, 0438, 0288, 0318, 0248, 0249, 0257, 0258, 0096, 0097, 0177, 0442, 0205, 0352
THALIA/SYMBL	AUTOMATIC GEARBOX	•	•	•	•	•	*	, 0437, 0440, 0217, 0379, 0412, 0487, 0488, 0445, 0451, 047 3, 0017, 0480, 0344, 0215, 0055, 0014, 0470, 0453, 0442, 02 76, 0438
THALIA/SYMBL	CONNECTION UNIT	•	•	• •	•	*	*	0554, 0504, 0600, 0590, 0595, 0585, 0597, 0587, 0392, 0401, 0583, 0593, 0544, 0435, 0408, 0594, 0584, 0133, 0028, 055, 0538, 0437, 0395, 0425
THALIA/SYMBL	IMMOBILISER	•	•	• •	•	*	*	0082, 0059, 0279, 0280, 0549, 0539, 0588, 0598, 0028
THALIA/SYMBL	INJECTION	•	•	•	•	•	*	0277, 0442, 0179, 0079, 0112, 0119, 0366, 0493, 0498, 0156, 0013, 0268, 0340, 0070, 0272, 0181, 0182, 0183, 0184, 0185
TRAFIC II	A. B. S.	•	•	• •	*	*	*	, 0325, 0367, 0329
TRAFIC II	ADAPTATION UNIT	•	•	• •	0	0	0	
TRAFIC II	AIRBAG / PRETENSIONERS	•	•	• •	0	•	•	0175, 0319, 0288, 0174, 0205, 0352, 0438, 0442, 0318, 0064
TRAFIC II	AUTOMATIC GEARBOX	•	•	• •	•	•	0	0458, 0476, 0274, 0448, 0477, 0475, 0438, 0442, 0490
TRAFIC II	CONNECTION UNIT	•	•	• •	•	•	•	0028
TRAFIC II	DRIVING SCHOOL UNIT	•	•	• •	0	0	0	
TRAFIC II	HEATER	•	•	• •	•	•	0	
TRAFIC II	IMMOBILISER	•	•	• •	•	•	•	0028
TRAFIC II	INJECTION	•	•	• •	•	•	•	0277, 0179, 0079, 0442, 0407, 0434, 0379, 0412, 0119, 0114, 0454, 0428, 0399, 0382, 0415, 0013, 0362, 0361, 0009, 015
TRAFIC II	PARKING ASSISTANCE							
TRAFICII P2/3	A. B. S.	•	•	• •	•	•	*	0040, 0438, 0325, 0329, 0367, 0039, 0056, 0442, 0363, 0126 , 0209, 0125
TRAFICII P2/3	ADAPTATION UNIT	•	•	• •	0	•	0	
TRAFICII P2/3	AIR CONDITIONING	•	•	• •	•	•	•	0369, 0449, 0442
TRAFICII P2/3	AIRBAG / PRETENSIONERS	•	•	• •	0	•	•	0288, 0064, 0175, 0174, 0318, 0205, 0352, 0438, 0442
TRAFICII P2/3	AUTOMATIC GEARBOX	•		• •	•	•	0	0448, 0476, 0274, 0477, 0475, 0438, 0490, 0489, 0442
TRAFICII P2/3	COMMUNICATIONS UNIT	•	•	• •	•	•	*	0567, 0517, 0088, 0535



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

TRAFICII P2/3	HEATER	•	•	•	•	•	•	0	
						_			0274, 0441, 0206, 0353, 0110, 0045, 0455, 0151, 0332, 0187
TRAFICII P2/3	INJECTION	•	•	•	•	•	•	•	, 0112, 0117, 0310, 0439, 0406, 0013, 0340, 0079, 0179, 022 0, 0060, 0281, 0247, 0114, 0461, 0007, 0008, 0457
,									0265, 0088, , 0156, 0152, 0568, 0344, 0069, 0312, 0004, 005
TRAFICII P2/3	INSTRUMENT PANEL	•	•		•	•	•	•	8, , , 0195, 0230
TRAFICII P2/3	MULTIMED. CONNECTION	•	•	•	•	0	•	0	0567
TRAFICII P2/3	MULTIMEDIA INTERFACE	•	•	•	•	•	•	•	0484, 0552, , 0541
TRAFICII P2/3	PARKING ASSISTANCE	•	•	•	•	0	•	•	0485, 0044, 0342, 0442
TRAFICII P2/3	RADIO	•	•	•	•	•	•	•	
TRAFICII P2/3	UCH	•	•	•	•	•	•	•	0539, 0549, 0077, 0238, 0027, 0078, 0557
TWINGO II	A. B. S.	•	•	•	•	•	•	*	0056, 0156, 0367, 0325, 0442, 0438, 0317, 0039, 0329, 0273 , 0022
TWINGO II	AIR CONDITIONING	•	•	•	•	•	•	•	0369, 0167, 0157, 0442
TWINGO II	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0288, 0096, 0257, 0145, 0146, 0071, 0072, 0097, 0258, 0099, 0260, 0102, 0249, 0318, 0205, 0352, 0442
TWINGO II	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	0274, 0448, 0476, 0477, 0438, 0489, 0490, 0442
TWINGO II	INJECTION	•	•	•	•	•	•	•	0274, 0187, 0206, 0353, 0441, 0112, 0271, 0310, 0439, 0455, 0073, 0074, 0075, 0076, 0060, 0247, 0114, 0220, 0007, 000 8, 0465
TWINGO II	INSTRUMENT PANEL	•	•	•	•	•	•	•	0156, 0152, 0344, 0088, 0069, 0238, 0312, 0302, 0130, 0116 , 0265, 0442, 0148, 0230, 0004, 0058
TWINGO II	MULTIMED. CONNECTION	•	•	•	•	0	•	0	0567
TWINGO II	MULTIMEDIA INTERFACE	•	•	•	•	•	•	•	0484, 0552, 0541, 0369
TWINGO II	PARKING ASSISTANCE	•	•	•	•	0	•	•	0485, 0044, 0342, 0442
TWINGO II	RADIO	•	•	•	•	•	•	•	
TWINGO II	REV COUNTER/SYMBOL	•	•	*	•	•	•	•	0559, 0344, 0547, 0531, 0532
TWINGO II	UCH	•	•	•	•	•	•	•	, 0048, 0016, 0120, 0338, 0131, 0233, 0314, 0137, 0077, 002 6, 0030, 0283, 0373, 0164, 0027, 0078, 0234, 0193, 0019
TWINGO II	VARIABLE P.A.S.	•	•	•	•	0	•	•	0542
TWINGO PHASE 2	A. B. S.	•	•	•	•	•	*	*	0438, 0039, 0367, 0325,
TWINGO PHASE 2	AIRBAG / PRETENSIONERS	•	•	•	•	*	•	*	0438, 0205, 0352, 0413, 0061, 0426, 0424, 0396, 0320, 0208 , 0354, 0437, 0064, 0175, 0319, 0288



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

TWINGO PHASE 2	AUTOMATIC GEARBOX	•	•	•	•	•	•	*	, 0458, 0476, 0274, 0156, 0477, 0438, 0442, 0448, 0490, 048 9
TWINGO PHASE 2	CONNECTION UNIT	•	•	•	•	•	*	*	0392, 0401, 0544, , 0435, 0408, 0554, 0504, 0028, 0133, 057 5
TWINGO PHASE 2	GAS INJ.	•	•	•	•	•	•	*	0442
TWINGO PHASE 2	IMMOBILISER	•	•	•	•	•	*	*	0082, 0059, 0279, 0280, 0549, 0539, 0588, 0598, 0133, 0028 , 0575
TWINGO PHASE 2	INJECTION	•	•	•	•	•	*	•	0381, 0414, 0398, 0427, 0179, 0079, 0277, 0212, 0393, 0442
TWINGO PHASE 2	VARIABLE P.A.S.								
VEL SATIS	A. B. S.	•	•	•	•	•	•	•	0056, 0367, 0003, 0156, 0297, 0325, 0442, 0438, 0499, 0495, 0329
VEL SATIS	AIR CONDITIONING	•	•	•	•	•	•	•	0369, 0346, 0129, 0166, 0062, 0090, 0442
VEL SATIS	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0288, 0064, 0175, 0318, 0205, 0352, 0438, 0442, 0319
VEL SATIS	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	0445, 0443, 0442
VEL SATIS	DISCHARGE LAMP	•	•	•	•	•	•	•	0369, 0514
VEL SATIS	DISTANCE REGULATOR	•	•	•	•	0	•	•	0326, 0438, ,
VEL SATIS	HEATER	•	•	•	•	•	•	0	
VEL SATIS	INJECTION	•	•	•	•	•	•	*	0274, 0455, 0310, 0439, 0045, 0277, 0151, 0332, 0441, 0179, 0079, 0442, 0340, 0013, 0018, 0353, 0206, 0112, 0117
VEL SATIS	INSTRUMENT PANEL	•	•	•	•	•	•	•	0369, 0195, 0087, 0349, 0240, 0241, 0358, 0359, 0235, 0236, 0442, 0085, 0312, 0121, 0350, 0156, 0152, 0005, 0344, 0348, 0088, 0238, 0204, 0025, 0069, 0068, 0229, 0231, 0228, 0244, 0370, 0245, 0337, 0298, 0357, 0221, 0222, 0223, 0224, 0147
VEL SATIS	PARKING ASSISTANCE	•	•	•	•	0	•	•	0485, 0044, 0342, 0442
VEL SATIS	PARKING BRAKE	•	•	•	•	•	•	•	0483, 0309, 0436, 0484, 0442
VEL SATIS	TYRES	•	•	•	•	•	•	•	0275, 0278, 0369, 0315, 0053, 0122
VEL SATIS	UCH	•	•	•	•	•	•	•	0512, 0351, 0049, 0508, 0156, 0050, 0051, 0237, 0077, 0370, 0282, 0204, 0314, 0164, 0346, 0269, 0160, 0159, 0021, 0078, 0115, 0023, 0027, 0186, 0341, 0107, 0029, 0355, 0089, 0211, 0347, 0238
VELSATIS PH2	A. B. S.	•	•	•	•	•	•	•	0056, 0367, 0003, 0156, 0297, 0325, 0442, 0438, 0499, 0495, 0329, 0328, 0345, 0043, 0273, 0022, 0054, 0169
VELSATIS PH2	AIR CONDITIONING	•	•	•		•	•	•	0369, 0062, 0090, 0346, 0129, 0166, 0442



#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported. lacktriangle This function is the new feature in this version.

VELSATIS PH2	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0288, 0064, 0175, 0318, 0205, 0352, 0438, 0442
VELSATIS PH2	AUTOMATIC GEARBOX	•	•	•	•	•	•	0	0445, 0443, 0442, 0438, 0472, 0458, 0456
VELSATIS PH2	COMMUNICATIONS UNIT	•	•	•	•	•	•	•	0369
VELSATIS PH2	HANDS-FREE KIT	•	•	•	•	•	•	•	
VELSATIS PH2	HEATER	•	•	•	•	•	•	0	
VELSATIS PH2	INJECTION	•	•	•	•	•	•	*	0274, 0455, 0310, 0439, 0045, 0277, 0151, 0332, 0441, 0179, 0079, 0442, 0018, 0353, 0206, 0112, 0117, 0340, 0013, 0331, 0272, 0110, 0187
VELSATIS PH2	INSTRUMENT PANEL	•	•	•	•	•	•	•	0195, 0369, 0350, 0156, 0152, 0005, 0344, 0348, 0088, 0238, 0312, 0204, 0025, 0349, 0069, 0068, 0229, 0231, 0228, 0244, 0370, 0245, 0337, 0298, 0357, 0221, 0222, 0223, 0224, 0442, 0147
VELSATIS PH2	LIGHTING	•	•	•	•	•	•	•	0369, , 0505, 0521, 0563
VELSATIS PH2	PARKING ASSISTANCE	•	•	•	•	0	•	•	0485, 0044, 0342, 0442, 0447
VELSATIS PH2	PARKING BRAKE	•	•	•	•	•	•	•	0483, 0309, 0436, 0484, 0442
VELSATIS PH2	PARKING PROX CAN	•	•	•	•	0	•	•	0485, 0044, 0342, 0459, 0460, 0442, 0447, 0438
VELSATIS PH2	RADIO								
VELSATIS PH2	UCH	•	•	•	•	•	•	•	0135, 0512, 0162, 0012, 0351, 0275, 0278, 0369, 0156, 0107, 0347, 0346, 0370, 0077, 0283, 0203, 0204, 0164, 0314, 016 0, 0159, 0161, 0078, 0023, 0021, 0115, 0316, 0180, 0335, 00 84, 0165, 0211, 0360, 0442, 0122, 0284, 0024
WIND	A. B. S.	•	•	•	•	•	•	*	0056, 0156, 0325, 0442, 0438, 0367, 0317, 0039, 0329, 0022 , 0273
WIND	AIR CONDITIONING	•	•	•	•	•	•	•	0157, 0369, 0167, 0442
WIND	AIRBAG / PRETENSIONERS	•	•	•	•	0	•	•	0288, 0318, 0259, 0260, 0257, 0249, 0096, 0099, 0102, 0145, 0146, 0098, 0442, 0352, 0205
WIND	INJECTION	•	•	•	•	•	•	•	0274, 0187, 0206, 0353, 0441
WIND	INSTRUMENT PANEL	•	•	•	•	•	•	•	0195, 0005, 0088, 0091, 0069, 0344, 0204,
WIND	MULTIMED. CONNECTION	•	•	•	•	0	•	0	0567
WIND	MULTIMEDIA INTERFACE	•	•	•	•	•	•	•	0484, 0552, 0541
WIND	RADIO	•	•	•	•	•	•	•	
WIND	SUNROOF CONTROL UNIT	•	•	•	•	0	•	0	



#### NOTES:

This function is supported.This function is not supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

▲ This function is the new feature in this version.

WIND	UCH	•	•	•	•	•	•	•	, 0048, 0016, 0120, 0338, 0131, 0314, 0137, 0077, 0026, 003 0, 0283, 0373, 0164, 0027, 0078, 0234, 0193, 0534, 0019
WIND	VARIABLE P.A.S.	•	•	•	•	0	•	•	0542



index	Specil Function Name	index	Specil Function Name
0001	3-button key	0310	Save computer data
0002	Abs type	0311	Seat belt light
0003	Abs/esp calibration	0312	Seat belt reminder buzzer
0004	Adac configuration	0313	Seat belt warning module
0005	Adac display type	0314	See-me-home lighting
0006	Adaptive value - a/f ratio	0315	Selection of valve set
0007	Adaptives after regenerating particle filter	0316	Selective opening of doors
8000	Adaptives after replacing cabin filter	0317	Sensor offsets
0009	Adaptives on egr valve fault	0318	Side on which steering wheel fitted
0010	Additional heating	0319	Side sensor configuration
0011	Adjust oil change counter	0320	Side sensors programming
0012	Aerial test	0321	Siemens probe configuration
0013	Air conditioning	0322	Slope sensor adjustment
0014	Air conditioning connection fault finding	0323	Special notes on commercial vehicles
0015	Air conditioning programming	0324	Speed limiter
0016	Air conditioning type	0325	Speedo index
0017	Air conditioning with wire connection	0326	Steering angle offset
0018	Air path programming	0327	Steering angle sensor initialization
0019	Alarm	0328	Steering wheel angle offset sensor
0020	Alternator type	0329	Steering wheel angle sensor
0021	Auto locking warning sound	0330	Steering wheel angle sensor programming
0022	Auto stop lights illumination authorisation	0331	Stop electrical consumer prevention
0023	Automatic closing of windows (by card)	0332	Stop fuel supply prevention
0024	Automatic folding of door mirrors	0333	Stop preheating prevention
0025	Automatic handbrake	0334	Stored energy management data
0026	Automatic lighting function	0335	Sunroof
0027	Automatic locking when driving	0336	Tailgate flap
0028	Automatic relocking	0337	Tank capacity
0029	Automatic seat recall	0338	Temperature display
0030	Automatic wiping function	0339	Temperature units
0031	Avantime (f4r): with heated windscreen	0340	Thermoplungers
0032	Avantime (f4r): without heated windscreen	0341	Timer courtesy light
0033	Avantime(except f4r): with heated windscr.	0342	Tone adjustment



index	Specil Function Name	index	Specil Function Name
0034	Avantime (expt f4r): without heated windscr.	0343	Toxicity sensor
0035	B/c with fr/rr thorax + head airbags	0344	Trajectory control
0036	B/c with front thorax + head airbags	0345	Transverse acceleration offset sensor
0037	B/c without side airbags	0346	Type of power steering
0038	Behr probe configuration	0347	Tyre pressure monitor function
0039	Bleed hydraulic unit and braking circuits	0348	Tyre pressure monitoring
0040	Bleeding the braking system	0349	Tyre pressure units
0041	Bodywork type	0350	Uch
0042	Boiler	0351	Uch connections test -> card reader
0043	Brake pressure offset sensor	0352	Unlock computer
0044	Buzzer volume	0353	Unlock injector control
0045	Cabin filter regeneration	0354	Unlock passenger's front air bag
0046	Calibr. entry lev. instr. panel fuel gauge	0355	Unlocking mode. doors hands free
0047	Calibr. mid/top range instr. panel fuel gauge	0356	Upc comp. type
0048	Calibration	0357	Update odometer
0049	Card battery charge tester	0358	V4y automatic gearbox
0050	Card locking	0359	V4y manual
0051	Card reminder warning	0360	Valve set selection
0052	Card/key	0361	Van fast idle speed decrease
0053	Change in triggering limit	0362	Van fast idle speed increase
0054	Chassis wear programming	0363	Veh. speed at initialization
0055	Check motor torque by abs	0364	Vehicle engine type
0056	Check target teeth	0365	Vehicle family
0057	Childproof lock	0366	Vehicle function programming
0058	Clock	0367	Vehicle parameters
0059	Coded diesel solenoid valve engine immobiliser	0368	Vehicle speed signal transmitter
0060	Commercial vehicle idle speed modification	0369	Vehicle type
0061	Comp configuration	0370	Voice synthesiser
0062	Compressor type	0371	W fr chest airbags w/out head-lvl airbags
0063	Config. without recycling flap auto-setting	0372	Windscreen type
0064	Configuration of system components	0373	Wiper intermittent speed ring
0065	Configuration with recycling flap auto-setting	0374	With abs
0066	Consumption measurement units	0375	With ac (fixed capacity compressor)



index	Specil Function Name	index	Specil Function Name
0067	Control panel type	0376	With ac (variable capacity compressor)
0068	Cruise contr./sp. limit. speed diff.	0377	With air bag
0069	Cruise ctrl/spd limiter	0378	With air con / without heated windscreen
0070	Cruise ctrl/speed limiter	0379	With air conditioning
0071	Curtain side air bag, driver's side	0380	With air conditioning / with heated windscreen
0072	Curtain side air bag, passenger side	0381	With automatic transmission
0073	Cylinder 1 injector code	0382	With boiler
0074	Cylinder 2 injector code	0383	With catalytic converter
0075	Cylinder 3 injector code	0384	With coolant sensor
0076	Cylinder 4 injector code	0385	With cruise control
0077	Daytime running lights	0386	With evaporator temperature sensor
0078	Deadlocking	0387	With fr chest airbags+head-level airbags
0079	Decrement idle speed	0388	With fuel pump cut-out
0800	Diesel engine immobiliser	0389	With harrison type compressor
0081	Diesel injection	0390	With hazard lamps recall on trf
0082	Diesel/petrol eng immob without coded sol valve	0391	With heated rear screen
0083	Directional headlights	0392	With infra-red remote control
0084	Discharge lamp	0393	With manual gearbox
0085	Distance before next oil change	0394	With one-touch type control
0086	Distance before next oil change configuration	0395	With passenger's airbag
0087	Distance regulator	0396	With passenger's airbags
0088	Distance units	0397	With permanent type control
0089	Door unlocking mode	0398	With power assisted steering
0090	Drive ratio	0399	With power steering electric pump unit
0091	Drive type configuration	0400	With radio display
0092	Driver front air bag circuit 1	0401	With radio frequency remote control
0093	Driver front air bag circuit 2	0402	With recycling motor timer
0094	Driver lap strap pretensioner	0403	With sanden type compressor
0095	Driver' side rear frontal airbag	0404	With self levelling suspension
0096	Driver's front airbag	0405	With side airbags
0097	Driver's front buckle pretensioner	0406	With swirl flap
0098	Driver's front inertia reel	0407	With thermoplungers
0099	Driver's front side impact sensor	0408	With timed courtesy light



index	Specil Function Name	index	Specil Function Name
0100	Driver's lap strap/seat airbag	0409	Without air bag
0101	Driver's lateral sensor	0410	Without air con / with heated windscreen
0102	Driver's seat buckle sensor	0411	Without air con. / without heated windscreen
0103	Driver's seat position sensor	0412	Without air conditioning
0104	Driver's seat sensor	0413	Without airbags (pretensioners only)
0105	Driver's side rear inertia reel	0414	Without automatic transmission
0106	Driver's side rear strap sensor	0415	Without boiler
0107	Driving type	0416	Without catalytic converter
0108	E with side airbags	0417	Without coolant sensor
0109	E without side airbags	0418	Without cruise control
0110	Ecu memory	0419	Without evaporator temperature sensor
0111	Eeprom probe configuration	0420	Without fuel pump cut-out
0112	Egr adaptives	0421	Without hazard lamps recall on trf
0113	Egr programming	0422	Without heated rear screen
0114	Egr valve programming	0423	Without inhibition switch
0115	Electric child safety	0424	Without passenger seat
0116	Electric power assisted steering	0425	Without passenger's airbag
0117	Engine adaptives	0426	Without passenger's frontal airbag
0118	Engine immobiliser 2	0427	Without power assisted steering
0119	Engine parameter adaptives	0428	Without power steering electric pump unit
0120	Engine type	0429	Without radio display
0121	Engine/gearbox type	0430	Without recycling motor timer
0122	Enter recommended pressures	0431	Without self levelling suspension
0123	Enter vin code	0432	Without side airbags
0124	Erase obd fault memory	0433	Without swirl flap
0125	Esp automatic reconnection threshold	0434	Without thermoplungers
0126	Esp sensor programming	0435	Without timed courtesy light
0127	Espace: with evaporator sensor	0436	Write clutch pedal programming
0128	Espace: without evaporator sensor	0437	Write date of after sales operation
0129	Evaporator temperature sensor	0438	Write date of last after sales operation
0130	External temperature	0439	Write saved data
0131	External temperature sensor	0440	Write transmission oil change date
0132	Fault memory	0441	Write v.i.n.



index	Specil Function Name	index	Specil Function Name
0133	Flashing buzzer	0442	Write vin
0134	Flywheel angle offset reading	0443	Actuators sequential control
0135	Following tyre change	0444	Assisted engagement when stationary
0136	Front buckle pretensiometers	0445	Auto-adaptives
0137	Front fog lights	0446	Brake lining friction learning
0138	Front left-hand buckle pretensioner	0447	Caravan towing distance
0139	Front left-hand chest-level side airbag	0448	Clutch initial closed position
0140	Front left-hand inertia wheel	0449	Compressor feedback
0141	Front right-hand buckle pretensioner	0450	Computer reinitialization
0142	Front right-hand chest-level side airbag	0451	Converter lock up adaptive
0143	Front right-hand inertia wheel	0452	Egr bypass programming
0144	Front seat belt retractors	0453	Engine torque control function
0145	Front thorax side air bag, driver side	0454	Enter injector calibration data
0146	Front thorax side air bag, passenger side	0455	Enter injector codes
0147	Fuel gauge calibration	0456	Erase auto-adaptive values
0148	Fuel level display update	0457	Fast idle speed modification
0149	Fuel sender calibration (doi).	0458	Fault/s memorised
0150	Fuel sender calibration (europe)	0459	Front buzzer volume
0151	Fuel supply prevention	0460	Front tone setting
0152	Fuel type	0461	Idle speed reference
0153	G/s with head airbags	0462	Ignition coil adaptive
0154	G/s without head airbag	0463	Initialization after automatic configuration
0155	Gas reserv. capac.	0464	Injection pump adaptatives
0156	Gearbox type	0465	Injector adaptives
0157	Geographical zone	0466	Injector adaptives no. 1
0158	Hands free	0467	Injector adaptives no. 2
0159	Hands free locking	0468	Injector adaptives no. 3
0160	Hands-free function	0469	Injector adaptives no. 4
0161	Hands-free start-up	0470	Lever locking connection fault finding
0162	Hands-free system test	0471	Memorization of nl and fl positions (engine stopped)
0163	Hazard lamps recall on trf	0472	Neutral position programming
0164	Hazard warning lights illumination by abs	0473	Obd memory
0165	Headlight washers	0474	Preparation before automatic configuration



index	Specil Function Name	index	Specil Function Name
0166	Heated windscreen	0475	Program clutch open position
0167	Heating resistor type	0476	Programme slip point
0168	Hokuriku probe configuration	0477	Programming selection/engaging zones
0169	Hydraulic brake compensation	0478	Rear brake unit initialization
0170	Idle air volume learning - factory mode	0479	Rear brake unit repositioning
0171	Idle air volume learning - service mode	0480	Selector lever locking
0172	Idle speed setting decrementation	0481	Sensor type
0173	Idle speed setting incrementation	0482	Shoe lining energy counter
0174	Igniters in series configuration	0483	Slope initialization
0175	Ignition module configuration	0484	Vehicle configuration
0176	Ignition timing adjustment	0485	Vehicle identification
0177	Impact information connection	0486	Vehicle speed limitation function
0178	Increase fuel warning threshold	0487	With obd
0179	Increment of idle speed	0488	Without obd
0180	Inhibition of selective door opening	0489	Write clutch initial closed position
0181	Injection prohibition	0490	Write date new clutch fitted
0182	Injector cylinder 1	0491	Cruise control/speed limiter programming
0183	Injector cylinder 2	0492	Flywheel target programming
0184	Injector cylinder 3	0493	High pressure circuit leak test
0185	Injector cylinder 4	0494	Pinking sensor programming
0186	Interior lighting	0495	Pressure sensor
0187	Interval of oil change (ocs) oxidation	0496	Programming throttle limits
0188	J without side airbags	0497	Richness regulation programming
0189	J with side ab w/o rear chest ab	0498	Static/autoconfiguration test
0190	K/l with f chest + curt airbags	0499	Transverse acceleration sensor
0191	K/l with f/r chest + curt airbags	0500	100 ah traction battery
0192	K/l without side airbags	0501	Abandon Key Reallocation
0193	Key type	0502	Amplifier
0194	Language configuration	0503	Angle of assembly
0195	Language version.	0504	Auto locking when driving function prevention
0196	Left hand drive	0505	Automatic fold-down headlights
0197	Left hand drive / 4 cylinder configuration	0506	Auxiliary input
0198	Left hand drive / 6 cylinder configuration	0507	Bii type



index	Specil Function Name	index	Specil Function Name
0199	Left hand drive / diesel configuration	0508	Card accumulator charge tester
0200	Left-hand curtain airbag	0509	Card testing
0201	Left-hand drive	0510	Cd changer and auxiliary input
0202	Left-hand side impact sensor	0511	Cd changer
0203	Light sensor sensitivity	0512	Check cards
0204	Lights automatic illumination	0513	Computer address
0205	Lock computer	0514	Computer calibration
0206	Lock injector control	0515	Computer configuration
0207	Lock latch locking	0516	Computer initialisation
0208	Lock passenger's front air bag	0517	Constructor/manufacturer
0209	Longitudinal acceleration sensor	0518	Cornering lights
0210	Longitudinal acceleration sensor offset	0519	Country model
0211	Memorising driver's seat position	0520	Daytime backlights
0212	Memory saved	0521	Dipped headlights raise
0213	Navigation system	0522	Dongle
0214	No abs	0523	Ec5 air bag
0215	Note oil wear counter	0524	Emergency call number
0216	Number of cylinders configuration	0525	End Of Key Reallocation Validation
0217	Oil change counter offset	0526	Engine Immobiliser Authorisation
0218	Oil change counter reset	0527	Engine Immobiliser Prohibition
0219	Oil change frequency	0528	Enter Access Code
0220	Oil change interval (ocs): dilution	0529	External components
0221	Oil change interval in km	0530	Fixed rear screen
0222	Oil change interval in months	0531	Free shift
0223	Oil change range: current value in km	0532	Free shift display
0224	Oil change range: current value in months	0533	Front buzzer volume
0225	Oil level displayed 20 sec when adac pressed	0534	Gradual switching on and off of courtesy light
0226	Oil level displayed 20sec	0535	Gsm antenna
0227	Oil measurement	0536	Gsm antenna circuit
0228	Oil measurement timer	0537	Gsm connectivity
0229	Oil pressure warning threshold	0538	Illuminate hazard lamps upon impact
0230	Oil service and odometry miles - km	0539	Key programming
0231	Oil temperature measurement threshold	0540	Light sensor signal



index	Specil Function Name	index	Specil Function Name
0232	One-touch electric window(s)	0541	Lighting
0233	One-touch electric window(s) / sunroof	0542	Mode number
0234	Opening elements central locking	0543	Number of heating elements
0235	Other at	0544	One-touch central door locking button
0236	Other manual	0545	Opening elements central locking
0237	Overspeed alarm for arabia	0546	Opening rear screen
0238	Overspeed function - arabia	0547	Overspeed light
0239	Oxygen sensor test	0548	Pointer animation
0240	P9x at	0549	Program body computer
0241	P9x manual	0550	Programming or reallocation of keys
0242	Parametrage prive 1	0551	Pulling correction program
0243	Parking aid	0552	Radio
0244	Parking proximity sensor function	0553	Radiofrequency type
0245	Particle filter	0554	Raid function authorisation
0246	Particle filter adaptives	0555	Raid function authorisation by diag
0247	Particle filter relative pressure sensor	0556	Range extender
0248	Pass airbag deactivation warning light	0557	Rear screen demister
0249	Passenger air bag locking mode	0558	Removable roof
0250	Passenger compartment heating resistor	0559	Rheostat lighting
0251	Passenger front air bag circuit 1	0560	Roll bars
0252	Passenger front air bag circuit 2	0561	Sdm air bag
0253	Passenger lap strap pretensioner	0562	Sdo
0254	Passenger presence detection sensor	0563	Signature
0255	Passenger side rear frontal airbag	0564	Stop&start function configuration
0256	Passenger side rear strap sensor	0565	Subwoofer
0257	Passenger's front airbag	0566	Sunroof control unit
0258	Passenger's front buckle pretensioner	0567	System configuration
0259	Passenger's front inertia reel	0568	Tachograph
0260	Passenger's front side impact sensor	0569	Tank capacity
0261	Passenger's lap strap/seat airbag	0570	Time format
0262	Passenger's lateral sensor	0571	Timed + batt
0263	Passenger's seat buckle sensor	0572	Timed lighting supply
0264	Passenger's side rear inertia reel	0573	Type 1 Unit



index	Specil Function Name	index	Specil Function Name
0265	Personalised oil change frequency	0574	Type 2 Unit
0266	Petrol injection	0575	Type n4
0267	Power assisted steering	0576	Type of parking brake
0268	Power steering electric pump unit	0577	Uch type
0269	Power-assisted steering program	0578	Unit of volume
0270	Preheating prevention	0579	Vehicle type: jeoe or jeop
0271	Pressure regulation adaptives	0580	Vehicle type: all types except jeop/jeoe
0272	Prevention of electrical consumers	0581	With Alarm
0273	Prevention of stop light auto illumination	0582	With adac
0274	Programmed values	0583	With automatic re-locking
0275	Programming a valve code	0584	With hazard lights upon impact
0276	Programming of no load and full load positions	0585	With overspeed warning
0277	Programming reinitialization	0586	With range extension
0278	Programming the codes of the four valves	0587	With running lights
0279	Programming with 1 key	0588	With sdo
0280	Programming with 2 keys	0589	With tailgate module
0281	Pump pressure regulator type	0590	With variable w'screen wiper intermittent
0282	Rain sensor	0591	Without Alarm
0283	Rain/light sensor	0592	Without adac
0284	Rain/luminosity sensor type	0593	Without automatic re-locking
0285	Raising of elect. window(with anti-pinch)	0594	Without hazard lights upon impact
0286	Read speedo index	0595	Without overspeed warning
0287	Read vehicle parameters	0596	Without range extension
0288	Reading impact contexts	0597	Without running lights
0289	Rear access aerials	0598	Without sdo
0290	Rear inertia reels	0599	Without tailgate module
0291	Rear left-hand inertia wheel	0600	Without variable intermittent wipe
0292	Rear right-hand inertia reel	0601	Writing conformity
0293	Rear screen wiper		
0294	Rear shelves		
0295	Rear thorax side air bag, driver side		
0296	Rear thorax side air bag, passenger side		
0297	Remote control cruise control		



index	Specil Function Name	index	Specil Function Name
0298	Reserve capacity		
0299	Reset oil change counter		
0300	Restart the computer		
0301	Rev counter		
0302	Rheostat presence		
0303	Right hand drive		
0304	Right hand drive / 4 cylinder configuration		
0305	Right hand drive / 6 cylinder configuration		
0306	Right hand drive / diesel configuration		
0307	Right-hand curtain airbag		
0308	Right-hand side impact sensor		
0309	Save clutch pedal programming		