


Quick Reference Guide

AutoLink AL529/AL529HD

Thank you for purchasing AUTEL tool. Manufactured to a high standard, our tool will, if used according to these instructions and properly maintained, give you years of trouble-free performance.

Getting Started

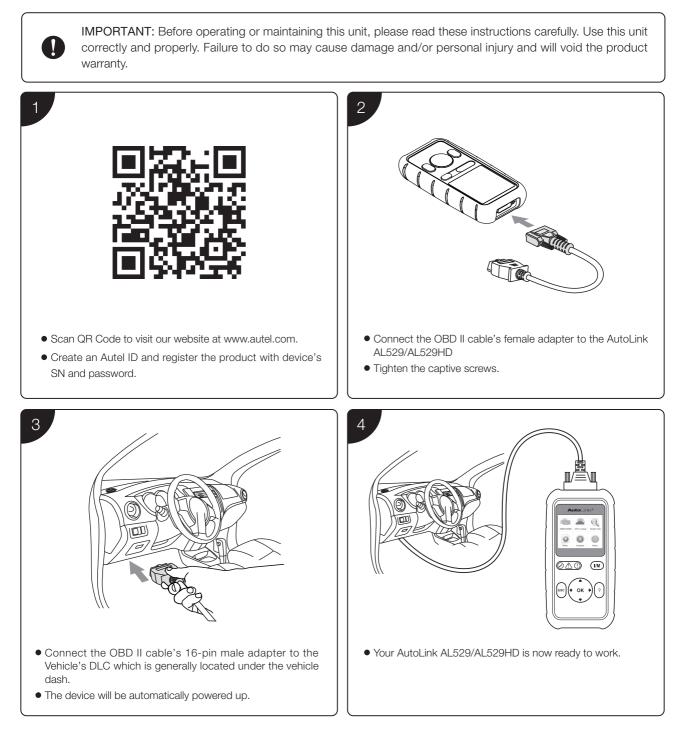



Please download the Maxi PC Suite from

www.autel.com > Support & Updates > Firmware & Downloads > Update Client, and install to your Windows-based computer.

Software Update and Delete

ALTER ALCONAUXON Lady. The or instrate Director and a station makes	2
 Run the Maxi PC Suite. Wait for the Log In window to display. Connect the device with the computer using the included USB cable. Select Update Mode in the tool. 	 Enter your Autel ID and password and wait for the Update window to display. If you forget your password, click the [Forget Password?] link to our website and retrieve your password. Or click Sign up to create an Autel ID to continue. Select tool and serial number, click OK to continue.
ATTEX NOTATION ATTEX NOTATION Image: And	AUTELL: water out and the set of the s
 In the Update window, select the appropriate files to install. 	 Click on the Installed tag and the list of installed programs will display. Select the program(s) you would delete.

Data Printing

- Connect the device to the computer with the USB cable supplied.
- Run Autel Printer on the computer which is installed after the installation of Maxi PC Suite.
- Select Playback function in the Main Screen of the tool. On the data menu screen, use the UP/DOWN scroll button to select the data you want to print. Wait for the review window to display, and then select Print function.
- The selected data will display on the textbox of the Autel Printer. By selecting the function keys on the right, you could execute the following operations:

Print – print all data in the textbox. (A printer should be connected to the computer.)

Edit - display an editable NOTEPAD window with recorded data.

Copy - copy data in the textbox to the clipboard.

Clear – delete data in the textbox.

Exit – quit the operation.

For service and support, please contact us.